

Notice about the law and the standard

High Speed Colour Printer

Model: HC5500T

This product contains RFID (Radio Frequency Identification) system.

Model: 444-59005

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Copyright © 2006 RISO KAGAKU CORPORATION

Preface

Welcome to the world of this product!

This machine is a finisher that is connected to a printer manufactured by our company and performs stapling, punching, and stitching of prints.

About This Manual

Notes

- 1) No part of this book may be reproduced without permission.
- 2) For improvement of the product, this manual is subject to change without prior notice.
- 3) Note that RISO is not liable for any influence caused by use of this manual or this unit.
- 4) For operation of the printer and the printer driver manufactured by our company, refer to the manuals supplied with the printer.
- 5) For scanning paper originals using an optional scanner, refer to the Help of the optional touch panel.
- 6) In this manual, the number of sheets is based on the dedicated paper (A4 / 85 g/m²).

Trademark Acknowledgments

All product names and company names written in this manual are trademarks or registered trademarks of their respective companies.

How to Read This Manual

Notation of Explanation of Operation

The following symbols are used in this manual for description of functions, operation, and notes.

 indicates items that should be noted or that are prohibited.

 indicates description concerning particularly useful information or information that should be known.

 indicates a title and page that should be referred to for understanding sufficiently an item. For referring to another operation manual, the name of the manual is also written.

Before starting explanation of operation, the text explains the features of restrictions of a function.

Paper Jam Occurs.

If a paper jam occurs in the Finisher or in the printer, printing stops and the jam location is indicated on the Operation Panel and the optional touch panel. In this case, remove the jammed paper and resume printing.

Since this printer performs high speed paper feeding and output, paper jams may occur at multiple locations. In this case, remove all the jammed paper.

 Gently remove the jammed paper. Take care not to leave pieces of paper inside the printer and the Finisher.

Paper Jam Location
Details of the locations indicated on the Operation Panel and the optional touch panel display are shown below.


● Operation Panel of printer

Paper Jam (Finisher)
Remove Paper
X O X O

1 2

A number that indicates the paper jam location is displayed.
H1~H2 : In the printer
F1~F12 : In the Finisher

● PS7R touch panel (optional)
As shown in the figure below, numbers that indicate paper jam locations are indicated on the screen. Touch the number to display the method of removing jammed paper.

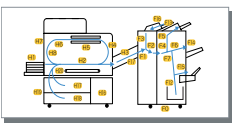

Remove all jammed paper until all the paper jam indications are cleared because paper remains if any indicator is displayed. After removing jammed paper, close the covers of the printer and the Finisher and check that all paper jam location display is cleared on the Operation Panel of the printer and on the optional touch panel display.

 For removing jammed paper from the printer (when H1 ~ H2 is lit), refer to "MCS500 User's Manual for Printer Main Body."  58

H3 Paper Jam in the Paper Receiving Section

1 Open the Transfer Cover.



2 Pull out and remove the jammed paper.



3 Close the Transfer Cover.




 If it is not easy to pull out the paper, open the Front Cover of the printer and remove the paper from the side of the Transfer Roller because the paper might be torn.


2

H4 Paper Jam at the Right Transfer Path Cover

1 Open the Transfer Cover.



2 Open the Right Transfer Path Cover.



3 Remove the jammed paper.



4 Return the covers to their original positions.



Operation procedure is described with illustrations.

 **WARNING** and  **CAUTION** are cautions for safety. Be sure to read these items before using this machine.

Safety Precautions

This section describes the items that should be followed for safe use of this machine. Be sure to read this section.

Warning Symbols

To use the machine properly and to prevent human injury and damage to properties, the following warning symbols are used. Read the meaning of the symbols to understand and then read this manual.

 WARNING	Indicates that incorrect handling by ignoring this symbol may cause death or serious human injury.
 CAUTION	Indicates that incorrect handling by ignoring this symbol may cause human injury or damage to properties.

Example of icons

	The  symbol indicates a prohibited action. A concrete prohibited action is drawn in the symbol or near the symbol. (The left figure shows prohibition of disassembly.)
	The  symbol indicates a forced action or an instruction. A concrete instruction is drawn in the symbol. (The left figure shows an instruction to remove the power plug from the electrical outlet.)

Location for Installation

CAUTION

- This machine weighs approximately 440 kg (970lb) (maximum value with full options). Place the machine on a flat and stable surface. Otherwise, the machine might be inclined, resulting in human injury.
- Do not place the machine in a dusty or humid location. Otherwise, a fire or an electric shock might occur.
- Do not place the unit in a location that is subject to water leak or water splashes. If water enters the unit, a fire or an electric shock might occur.

Power Connection

WARNING

- Install the machine near the wall socket to avoid using an extension cord between the machine and the wall socket. If an extension cord is absolutely required, do not use longer than 5m (15ft). Otherwise, a fire or an electric shock might occur.
- Do not damage or rebuild the power cord. Placing a heavy object on the cord or pulling or bending forcibly the cord may damage the cord, resulting in a fire or an electric shock.
- The power cord supplied with this product can be used only for this machine. Do not use it for another electric product. A fire or an electric shock might occur.
- Do not plug or unplug the power cord if your hands are wet. Otherwise, an electric shock might occur.



CAUTION

- Do not pull the power cord when unplugging it. Otherwise, it could become damaged and a fire or an electric shock might occur. Be sure securely to hold on to the plug before unplugging it.
- If the machine is not used for a long time, for example due to consecutive holidays, unplug the power cord from the electrical outlet for safety.
- Pull out the power plug from the electrical outlet more than once a year and clean the prongs of the plug and their surroundings. Dust collected on these areas can result in fire.

Handling

WARNING

- Do not place water containers or metallic objects on the machine. If water drips inside the machine or a metallic object drops inside it, a fire or an electric shock might occur.
- Do not place any bare fire source such as candle on the unit.
- Do not insert or drop any metallic material or flammable substances into the machine through any opening. A fire or an electric shock might occur.
- Do not remove the covers. Otherwise, you might be electrically shocked by the high-voltage part inside.
- Do not disassemble or rebuild the machine by yourself. Otherwise, a fire or an electric shock might occur.
- If the machine emits excessive heat, smokes or foul odour, immediately turn off the power, unplug the electrical (power) cord and contact your service representative because a fire or an electric shock might occur.
- If something drops inside the machine, immediately turn off the Main Power Switch, unplug the electrical (power) cord and contact your service representative. If you continue using it, a fire or an electric shock might occur.



CAUTION

- Never stick your hands or fingers in the openings around the Cover Sheet Tray and the Stacking Tray during operation. Otherwise, human injury might occur.
- When moving the machine, contact your service representative. If you try to move the machine by force, the machine might turn over, resulting in human injury.
- When removing jammed staples, take sufficient care to prevent injury to fingers.

Before Starting to Use

This section explains precautions you have to observe when using the machine.

Location for Installation

- The location for installation is determined based on consultation with the customer at the time of delivery.
- Contact your service representative before moving the machine.
- Avoid installing the machine in the locations listed below. Failure to observe this precaution may lead to machine failure or human injury.
 - Locations that are subject to sudden temperature change.
 - Extremely hot and humid locations or cold and dry locations
 - Heated locations or locations exposed to direct cold air, direct hot air, or direct radiant heat
 - Badly ventilated locations
 - Dusty locations
 - Locations that are subject to frequent vibration

Operation Environment

- Install the machine in a location of which the levelness meets the following conditions.
 - Front to rear: 3 mm ($\frac{1}{8}$ ") or less
 - Side to side: 3 mm ($\frac{1}{8}$ ") or less
- Appropriate environment conditions are shown below.
 - Temperature range: 15°C - 30°C (59°F to 86°F)
 - Humidity range: 40% - 70%(noncondensing)

Overall Dimensions

Space for extending the Booklet tray is required.



The dimensions are expressed in mm.

Dimensions of HC full system (mm)

	Width	Depth	Height (*)	Remarks
Normal state	2,633	743	1,165	End of Standard Feed Tray to end of Booklet tray
Extended state	2,633	1,278	1,335	For opening/closing Paper Feed Tray on the stand and ink cover

*:The optional touch panel display is not included.

Handling of The Machine

- Do not turn off the Main Power Switch of the printer or unplug the electrical (power) cord during operation.
- Do not open any covers during operation.
- Do not move the machine.
- The machine has precision parts and driving parts inside. Do not handle the machine in other ways than described in this manual.
- Do not place heavy objects on or apply shocks to the machine.
- Be sure to open and close any cover gently.

Power Connection

- Connect the power plug securely to the electrical outlet to avoid improper connection.
- Install the machine near the electrical outlet.
- Use only the power cord supplied by the seller of the finisher, or use a cord that is earthed, not longer than 4.5m, rated not less than the finisher is rated, and authorized by the state or the region where it is used.

About connectors


- The allowable voltage for all input/output connectors is 5V.

Registration of Paper Size

Non-standard paper sizes can be registered in the printer or in the controller. When using non-standard size paper, be sure to register the size. Up to five sizes can be registered in the printer and up to 20 sizes can be registered in the controller. The paper sizes that can be registered are shown below. The paper sizes that can be used, however, differ depending on the finisher functions to be used.

④ Paper sizes that can be registered

	Width (Vertical)	Length (Horizontal)
Paper sizes that can be registered in the printer	100 - 330mm (3 ¹⁵ / ₁₆ - 13")	148 - 488mm (5 ¹³ / ₁₆ - 19 ³ / ₁₆ ")
Paper sizes that can be registered in the controller	90 - 316mm (3 ⁹ / ₁₆ - 12 ⁷ / ₁₆ ")	148 - 460mm (5 ¹³ / ₁₆ - 18 ¹ / ₈ ")

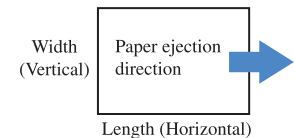

④ Relation between the finisher functions and the paper sizes that can be used

	Width (Vertical)	Length (Horizontal)
Booklet	210 - 316mm (8 ¹ / ₄ - 12 ⁷ / ₁₆ ")	280 - 457mm (11 - 18")
Stapler	203 - 297mm (8 - 11 ¹¹ / ₁₆ ")	182 - 432mm (7 ³ / ₁₆ - 17")
Output to Stacking Tray	182 - 316mm (7 ³ / ₁₆ - 12 ⁷ / ₁₆ ")	182 - 460mm (7 ³ / ₁₆ - 18 ¹ / ₈ ")
Offset output	203 - 297mm (8 - 11 ¹¹ / ₁₆ ")	182 - 460mm (7 ³ / ₁₆ - 18 ¹ / ₈ ")
2-fold	210 - 316mm (8 ¹ / ₄ - 12 ⁷ / ₁₆ ")	280 - 457mm (11 - 18")


☞ "HC User's Manual for Printer Main Body" "5.1 Paper Size Entry"

☞ "HC User's Manual for Console" "Controller Setting 2" "Custom Size Entry"


☞ "Finisher Function" ☞ p.2

Name of part

● Exterior

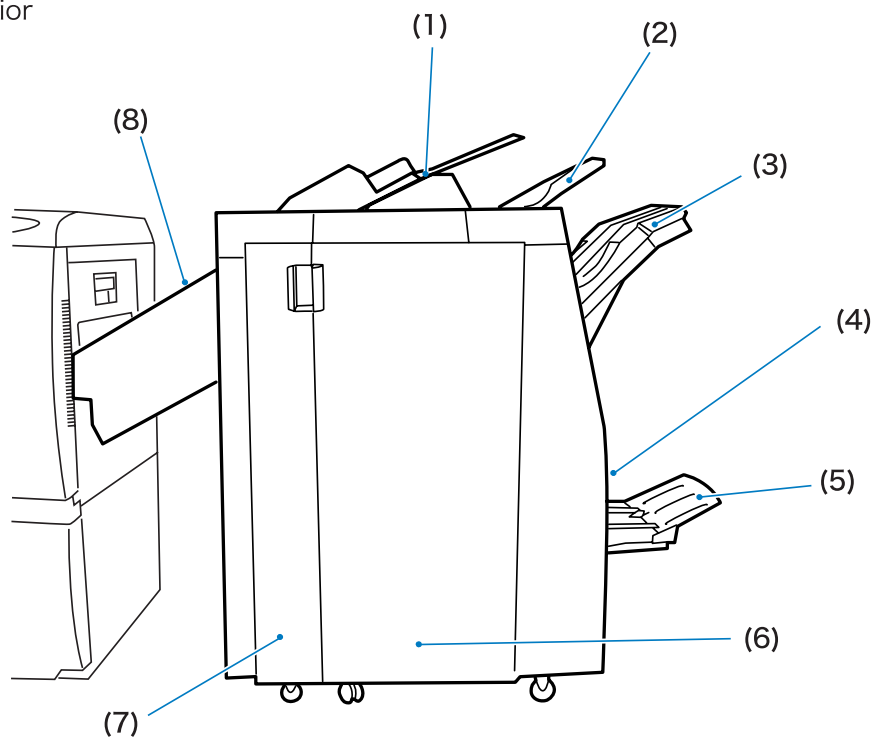

● Interior

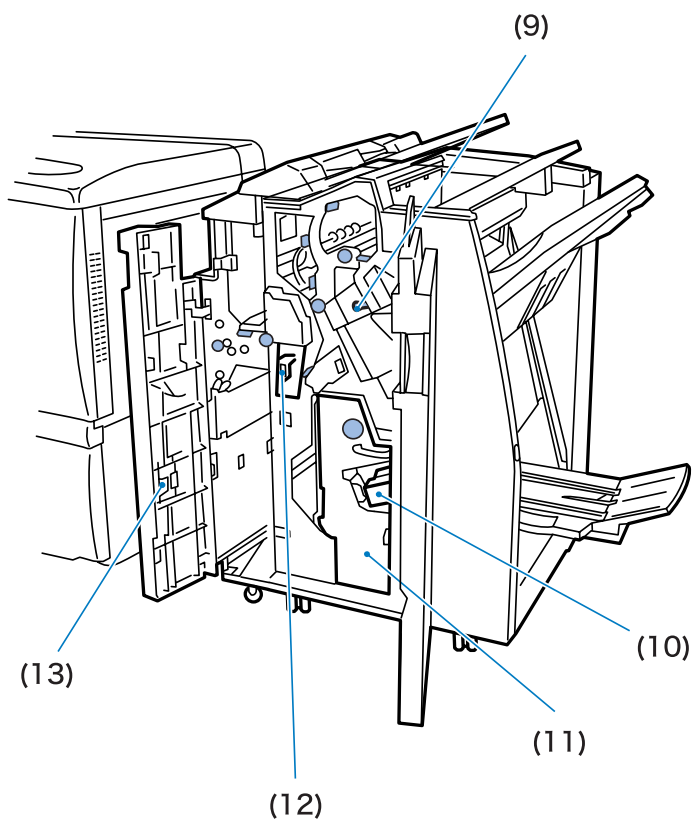


	Name of part	Function
(1)	Cover Sheet Tray	Load paper used as a front cover or a back cover. ☞ p.2  Paper placed here is not printed on.
(2)	Top Tray	If the Finisher functions are not used or if the output tray is not specified from the printer driver, prints are output here. Paper capacity: 500 sheets (*)
(3)	Stacking Tray	If the Stapler or Offset output function is used, prints are output here. Even if these functions are not used, this tray can be specified as the output tray from the printer driver. Paper capacity 2000 sheets (or 200 sets) (*)
(4)	Output button	Press to remove prints output on the Booklet tray so that the tray moves to a position that facilitates removal of prints.
(5)	Booklet tray	Booklets or twice-folded prints are output here. Paper capacity: 20 sets (*)
(6)	Right cover	-
(7)	Left cover	-
(8)	Transfer Cover	If a paper jam occurs when paper is transferred from the printer to the Finisher, open this cover and remove the jammed paper.
(9)	Stapler cartridge	A stapler cartridge is set. Take out when replacing staples or removing jammed staples. ☞ p.43 ☞ p.46
(10)	Stapler cartridge for centre binding	Two stapler cartridges for booklets are set. Take out when replacing staples or removing jammed staples. ☞ p.44 ☞ p.47
(11)	Booklet unit	-
(12)	Trash box in punching unit	Chips generated in punching are collected here. Take out when discarding chips. ☞ p.48
(13)	Stapler cartridge storage	Store stapler cartridges here.

* The paper capacity depends on the paper size, paper type, and orientation.

Finisher Applications


Add cover

A front cover and/or a back cover are added to prints. [p.2](#)

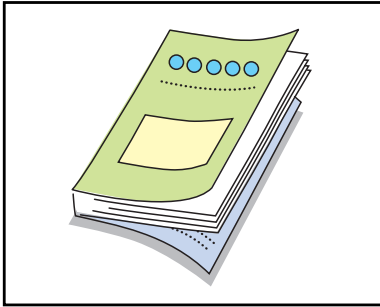


Paper fold (2-fold)

Inner 2-fold of prints is performed. [p.11](#)

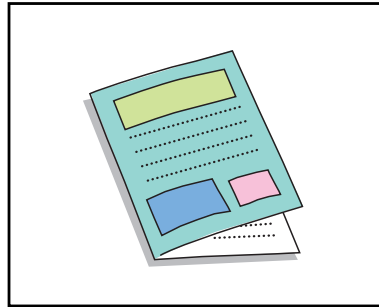


Stapler

Prints are stapled. [p.6](#)

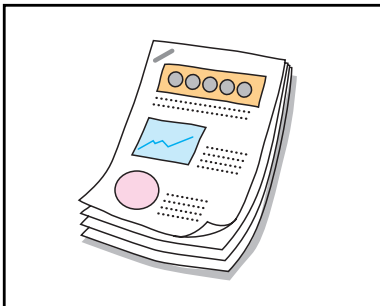


Booklet

2-fold booklets are made. Also centre binding can be performed with the Stapler function. [p.13](#)

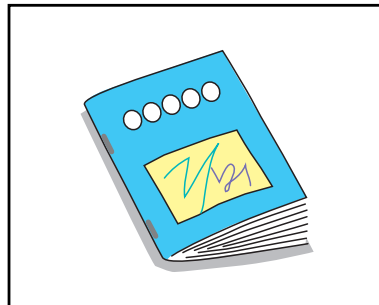


Punching

Prints are punched. [p.8](#)

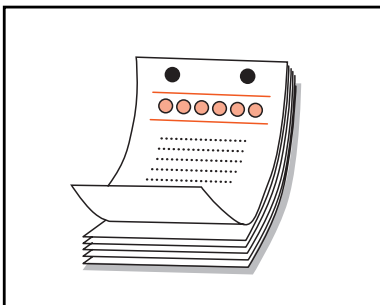

Offset output

Prints are output into the Stacking Tray with offset positioning. [p.15](#)

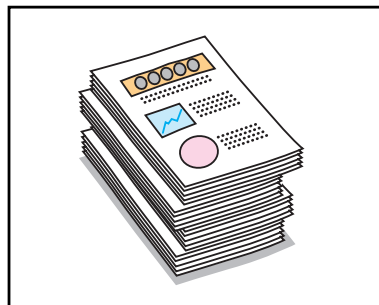

If HC Finisher A is connected, 2-hole or 3-hole punching can be made.

If HC Finisher B is connected, 2-hole or 4-hole punching can be made.

Chapter1 Finisher Applications 1

Finisher Functions	2
Add cover	2
Stapler	6
Punching	8
Paper Fold	11
Booklet	13
Output Tray	15
Offset Output	15
Example of Operation with Finisher	16
Example 1: Preparation of Stapled Material for Meeting	16
Example 2: Creation of Booklet with Centre Binding	18
Example 3: Creation of Pamphlets with Inner 2-fold	21

Chapter2 Troubleshooting 23

Explanation of Set Error Display	24
Error Message and Error symbols	24
Paper Jam Occurs	28
H3 Paper Jam in the Paper Receiving Section	30
H4 Paper Jam at the Right Transfer Path Cover	30
F1	31
F2	32
F3	33
F4	34
F5	35
F6	36
F7	37
F12	38
F13	39
F14	39
F15	40
F16	41
F17	42
Staples Run Out	43
For Stapler Cartridge UR1	43
For Stapler Cartridge UR2 or UR3	44
Stapling Cannot Be Performed Properly	45
For Stapler Cartridge UR1	46
For Stapler Cartridge UR2 or UR3	47
The Trash Box in Punching Unit is Full of Punch Dust	48
Other Trouble	49
The Finisher Does Not Operate	49
The Finisher Does Not Operate according to the Setting	49

Chapter3 Appendix 51

Consumables	52
About Consumables	52
Types of Consumables	52
Specifications.....	53
Index	54

Chapter1 Finisher Applications

This chapter describes finisher applications and principal finisher functions.

For details of the operation method and the setting method of the printer driver, refer to "HC5500 User's Manual for Printer Driver."


Finisher Functions

This section describes principal finisher functions.

For setting the functions described here, use the [Finisher] tab of the printer driver.


Add cover

A printed sheet of paper or another type of paper can be added to the body of prints as a front cover and/or a back cover. Load the covers in the Cover Sheet Tray of the Finisher or in the Interposer Tray of the printer.

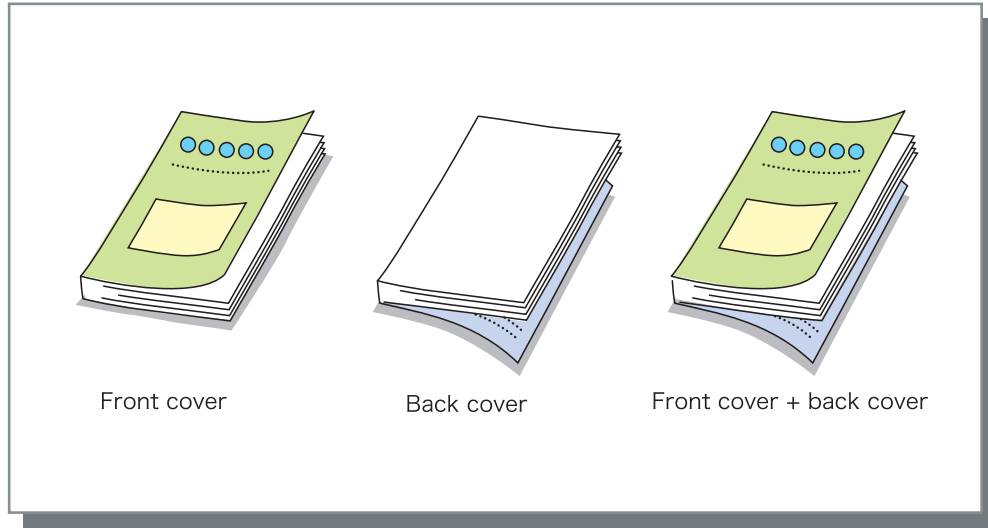

⦿ Paper Types That Can Be Used for Add Cover

- Paper size and HC5500setting orientation:

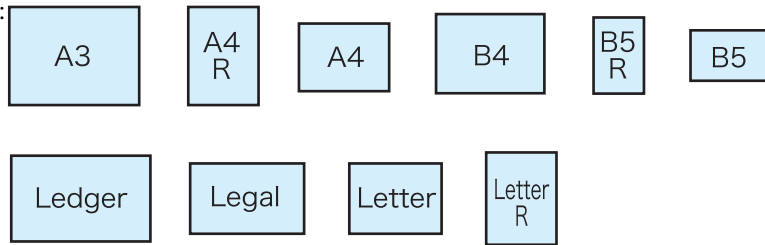

- Paper weight: For Cover Sheet Tray: 60g/m² - 220g/m² (16-lb bond to 58.7-lb bond)
For Interposer Tray (Standard Feed Tray): 60g/m² - 210g/m² (16-lb bond to 56-lb bond)
For Interposer Tray (Tray1/Tray2): 60g/m² - 104g/m² (16-lb bond to 28-lb bond)



- Up to 200 sheets can be loaded in the Cover Sheet Tray.
- If [Booklet] is [ON], back covers cannot be added.
- If [Separate books] is set in Details of [Booklet], either front covers or back covers cannot be added.
- The paper size that can be loaded as front covers are the same as the paper size for the body of prints. When loading front covers of a different size from the body of prints, set the paper size of the tray (Cover Sheet Tray / Interposer Tray) to the size of [Output paper size] on the [Layout] tab of the printer driver. However, do not set [Auto].
 - ☞ "4.1/4.2/4.3 Standard Feed Tray" of "HC5500 User's Manual for Printer Main Body"
 - ☞ "4.11 Cover Sheet Tray" of "HC5500 User's Manual for Printer Main Body"
- Irregular size paper cannot be used as covers.
- When loading covers in the Interposer Tray, setting is required in advance.
 - ☞ "5.3 Separation Paper" of "HC5500 User's Manual for Printer Main Body"

⦿ Settings of Printer Related to This Function

- 4.1 Standard Feed Tray Setting / 4.2 Tray 1 Setting / 4.3 Tray 2 Setting
- 4.11 Cover Sheet Tray
- 5.3 Separation Paper

⦿ Printer Driver Setting Related to This Function

- Output paper size on [Layout] tab

⦿ Method of loading Covers



Depending on the combination of finisher functions, load the covers face up or face down.

- For adding covers to booklets: Load the covers face down so that the first page is located on the left side.
 - For adding covers to prints other than booklets (Stapler, Punching, etc.): Load the covers face up so that the punching or stapling position is located on the right side.
- When using the Cover Sheet Tray of the Finisher, load the covers as shown below.

● When creating booklets:




Finished prints

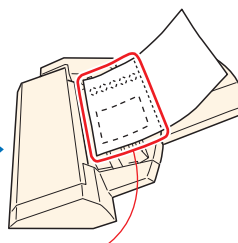
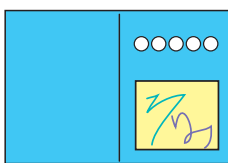


Load the covers face down so that the first page is located on the left side.

● When punching or stapling:

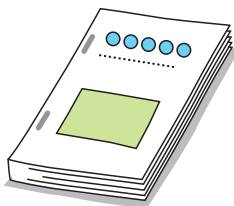


Finished prints

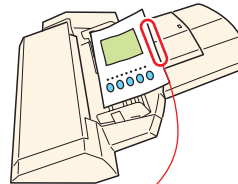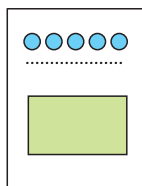


Load the covers face up so that the punching or stapling position is located on the right side.

- When using the Interposer Tray of the printer, load the covers as shown below.


● When creating booklets:

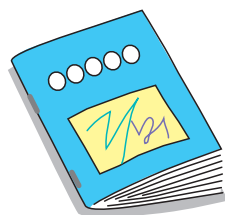

Finished prints

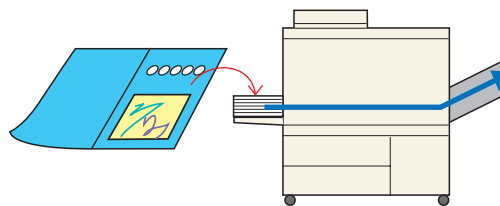

If the Interposer Tray is set as the Standard Feed Tray, load the covers face up so that the first page is located on the right side.

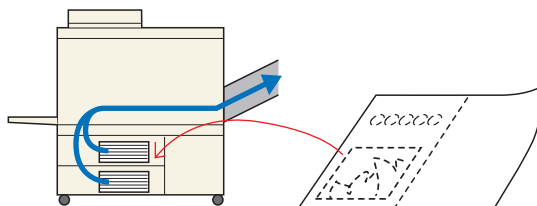


If the Interposer Tray is set as Feed Tray 1 or 2, load the covers face down so that the first page is located on the left side.


● When punching or stapling:



Finished prints

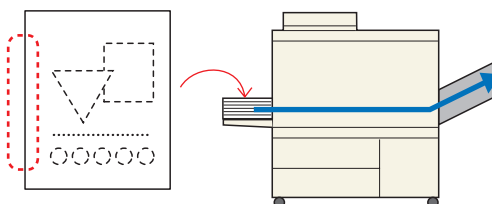


If the Interposer Tray is set as the Standard Feed Tray, load the covers face down so that the punching or stapling position is located on the left side.

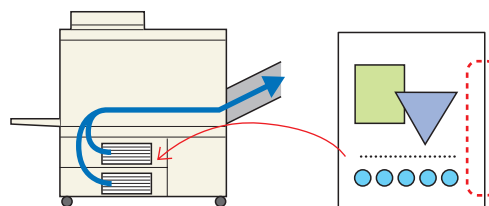


If the Interposer Tray is set as Feed Tray 1 or 2, load the covers face up so that the punching or stapling position is located on the right side.

● Example of punching or stapling

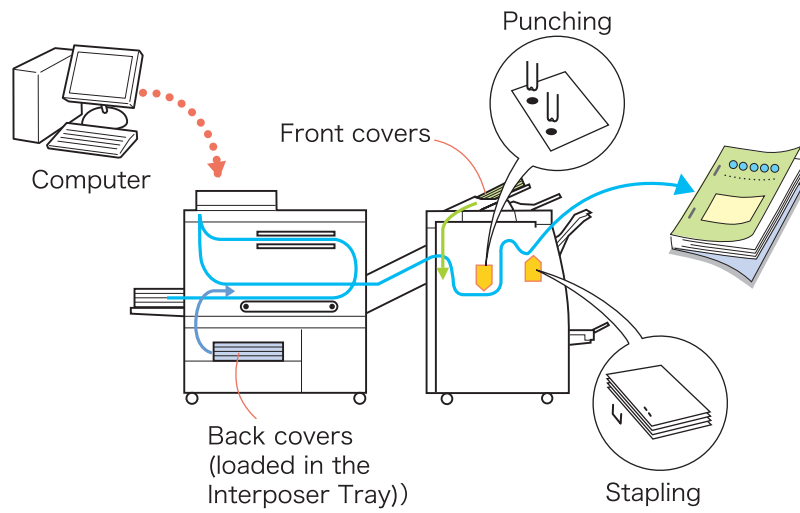

1

● Example of creating a booklet

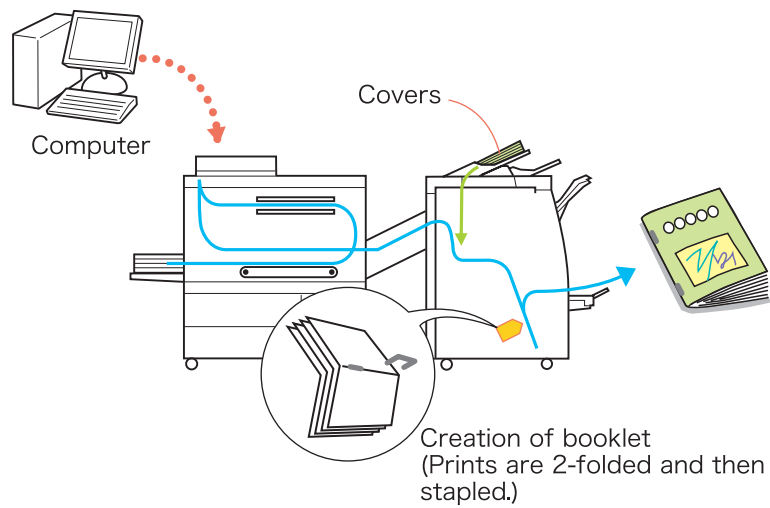


Stapler

Up to 100 sheets can be stapled at a specified position.

The initial setting is [OFF].


For the paper size and setting orientation, refer to p.10

▶ Stapled prints are output to the Stacking Tray.

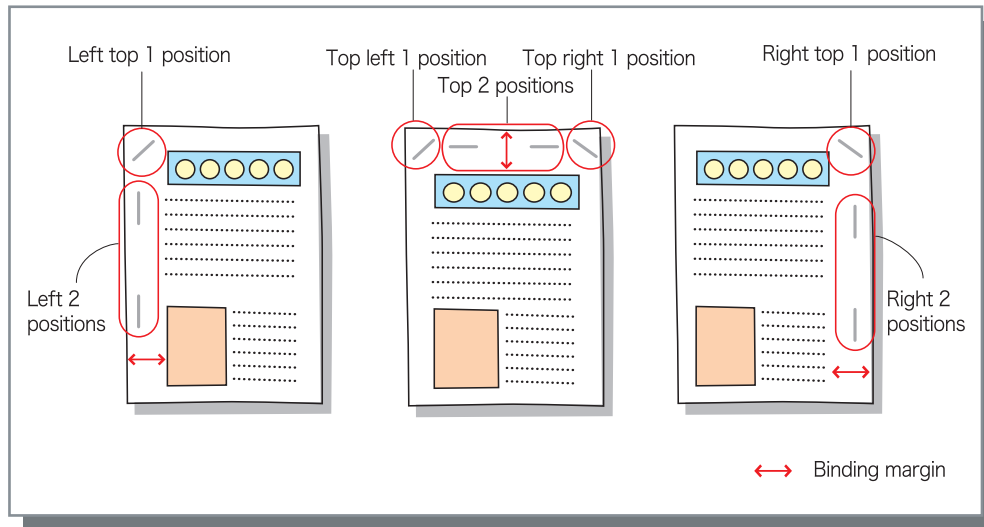

⊙ Paper Types That Can Be Used for Stapling

- Paper size and setting orientation:

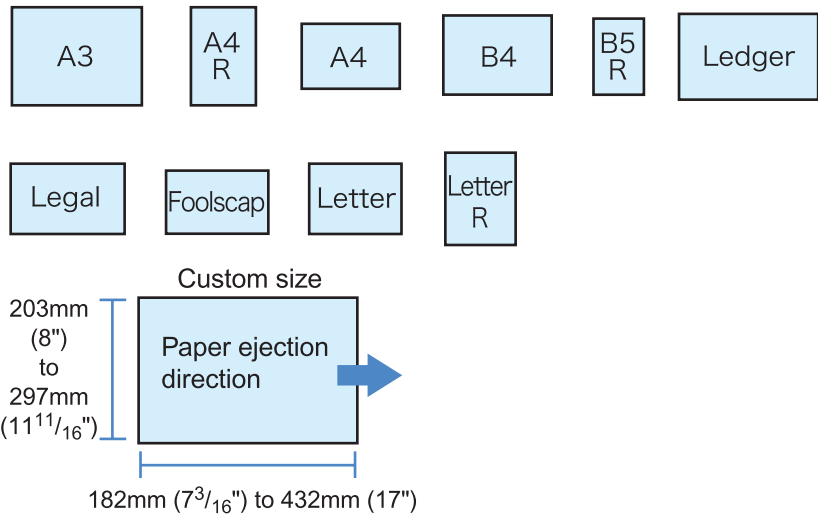

- Paper weight: 46g/m² - 210g/m² (12-lb bond to 56-lb bond) (60g/m² to 220g/m² [16-lb bond to 58.7-lb bond] for cover sheet)

⊙ Maximum Number of Sheets for Stapling

- For A4, A4-R, B5-R, letter, and letter-R: 2 to 100 sheets
- For standard sizes other than those above: 2 to 65 sheets


- ▶
- If the number of sheets exceeds the maximum number for stapling, printed sheets are output to the Stacking Tray without stapling.
 - For paper shown below, the maximum number for stapling is 2 to 65 sheets.
 - Paper with width in the paper ejection direction of 216 mm (8 1/2") or more
 - Paper larger than the size of 297 mm (11 11/16") long and 216 mm (8 1/2") wide

⦿ Binding Margin and Auto Reducing

If the original has no margin for stapling, a margin can be made.

The binding margin width can be set from 0 mm to 50 mm (2") in 1 mm(0.04") increments.

If the image exceeds the print area because of margin setting, you can turn on [Auto reducing] to reduce the image size automatically.

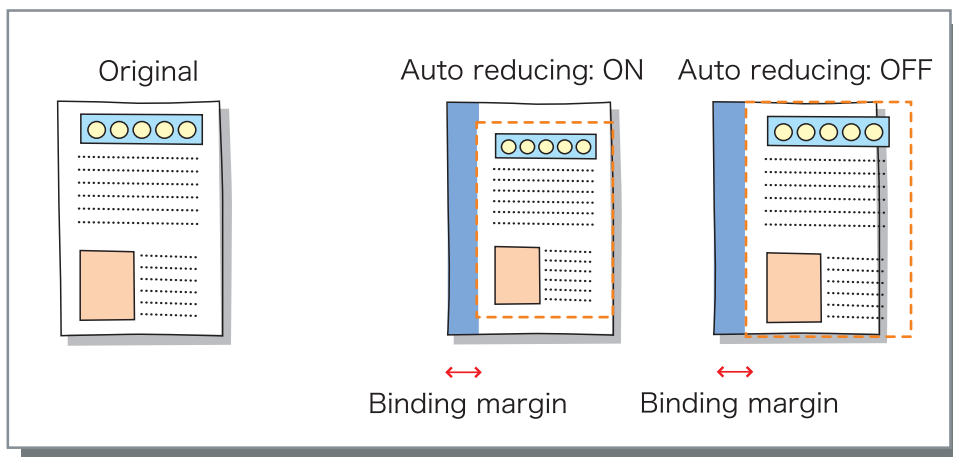


⦿ Relation to Punching

The Stapler function can be used with the Punching function. The selectable stapling positions are restricted according to the setting of Punching.

Setting of Punching	Stapling position
OFF	Left 2 positions / Left top 1 position / Top 2 positions / Top left 1 position / Top right 1 position / Right 2 positions / Right top 1 position
Left	Left 2 positions / Left top 1 position
Top	Top 2 positions / Top left 1 position / Top right 1 position
Right	Right 2 positions / Right top 1 position

⦿ Flow of Paper

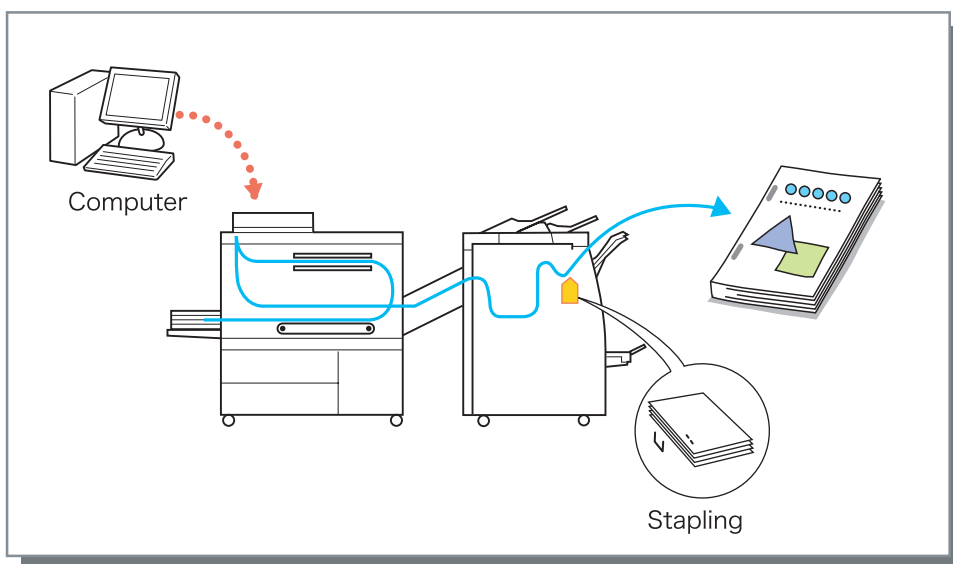


Punching

The punching hole position can be selected.

If HC Finisher A is connected, 2-hole or 3-hole punching can be made. If HC Finisher B is connected, 2-hole or 4-hole punching can be made.

The initial setting is [OFF].

For the paper size and setting orientation, refer to p.10

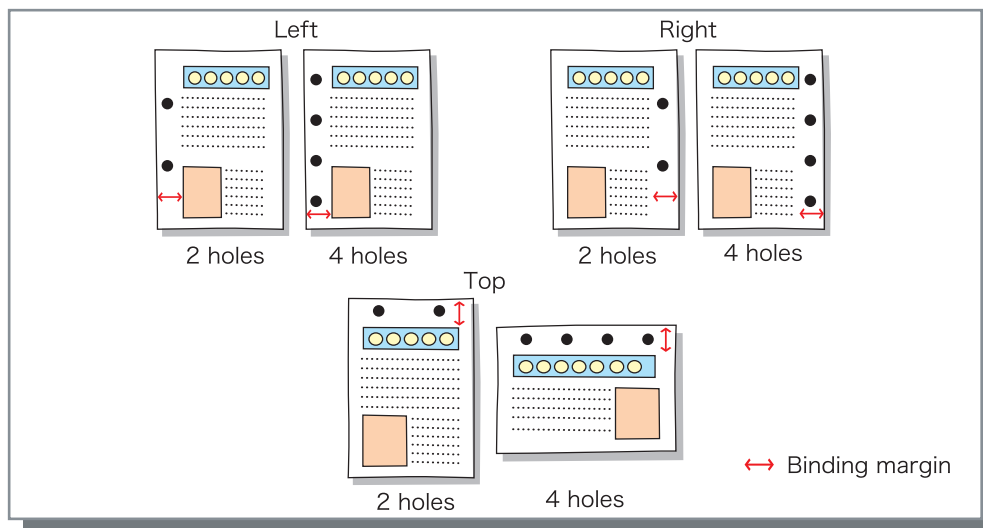

Paper Types That Can Be Punched

Punching hole	Paper size and setting orientation that can be used for punching
2 holes (initial setting)	A3 A4 R A4 B4 B5 R Ledger Legal Letter Letter R
3 holes	A3 A4 R B4 B5 R Ledger Letter R
4 holes	A3 A4 R Ledger Letter R

- Paper weight: 46g/m² - 157g/m² (12-lb bond to 42-lb bond) (up to 220g/m² [58.7-lb bond] for cover sheet)

Relation to Stapler

The Punching function can be used with the Stapler function. In this case, the selectable punching positions are restricted according to the setting of the Stapler function.


Setting of Stapler	Punching position
OFF	Left / top / right
Left 2 positions / Left top 1 position	Left
Top 2 positions / Top left 1 position / Top right 1 position	Top
Right 2 positions / Right top 1 position	Right

④ Binding Margin and Auto Reducing

A margin can be set so that the punching holes do not overlap the image area.


The binding margin width can be set from 0 mm to 50 mm (2") in 1 mm (0.04") increments.

If the image exceeds the print area because of margin setting, you can turn on [Auto reducing] to reduce the image size automatically.

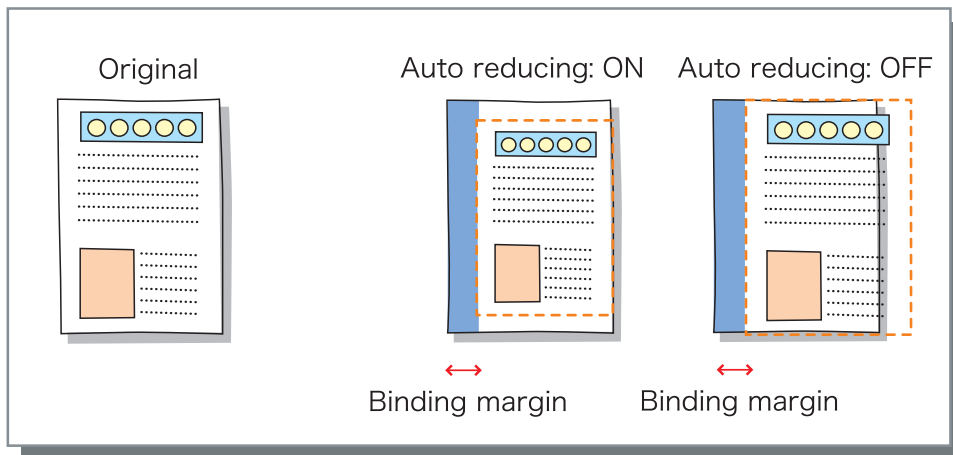

1

④ Flow of Paper






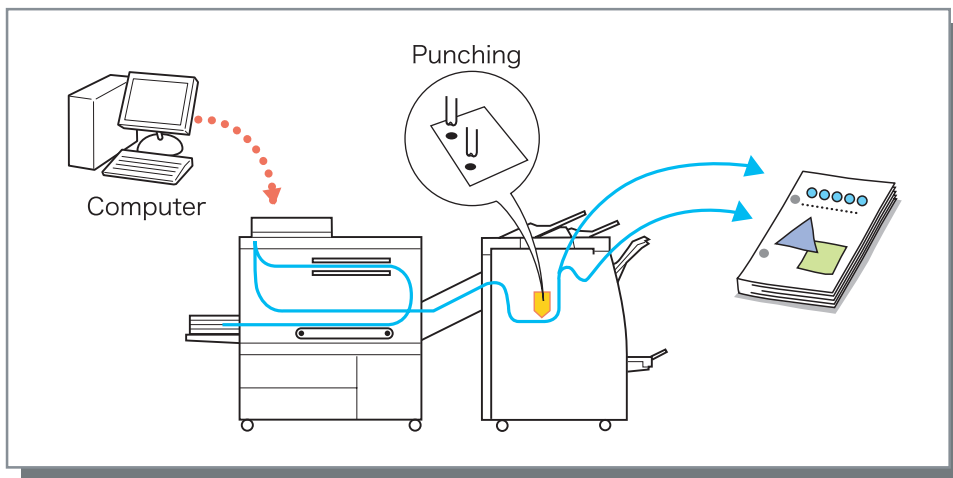


The tray to which prints are output is switched according to the setting of [Output Tray].

Relation between Paper Setting Orientation in Tray and Stapling/Punching Position

For stapling and punching, the paper width shall be within the range from 203 mm (8") to 297 mm (11¹¹/₁₆").

Load the paper in the proper orientation in a tray so that the stapling or punching position is perpendicular to the paper output direction. The image print orientation is automatically rotated according to the stapling/punching position and the paper setting orientation in the tray.

	Paper size and setting orientation in tray	A4-R, B5-R, Letter-R		A3, A4, B4, Ledger, Legal, Letter	
	Original	Portrait	Landscape	Portrait	Landscape
Paper output image	Left top 1 position / Left		—	—	
	Top left 1 position / Top	—			—
	Right top 1 position / Right		—	—	
	Top right 1 position / Top	—			—
	Top 2 positions / Top	—			—
	Left 2 positions / Left		—	—	
	Right 2 positions / Right		—	—	




If you set the stapling position to Left top 1 position, Right top 1 position or Top right 1 position on A4-R or A3 size paper, stapling is performed obliquely.



Paper Fold


2-fold functions can be used.

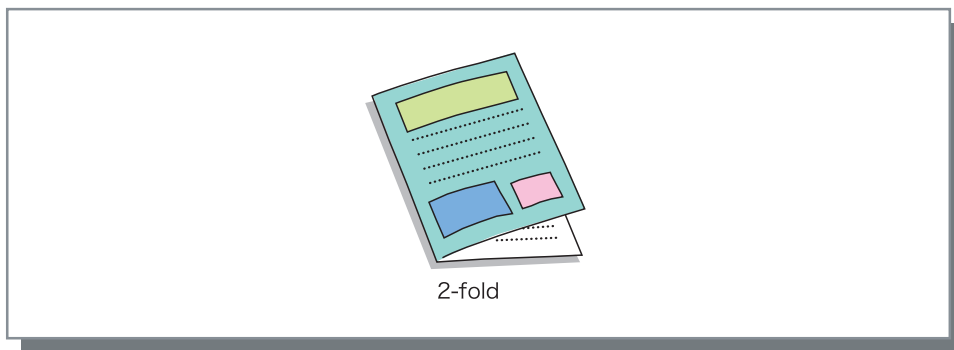

1

⦿ Paper Types That Can Be Used for Paper 2-fold

- Paper size and setting orientation:

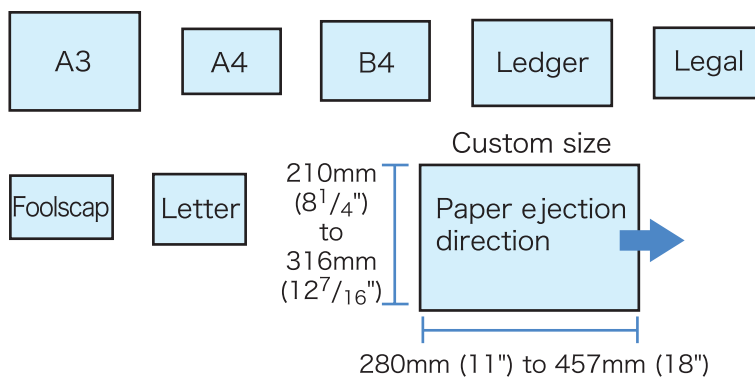

- Paper weight: 60g/m² to 105g/m² (16-lb bond to 28-lb bond)


⦿ Designation of Print Face

The print face can be selected.

- Print inside (initial setting): The print face (*) is located inside when the paper is folded.
- Print outside: The print face (*) is located outside when the paper is folded.

*First page in duplex printing

⦿ Flow of Paper

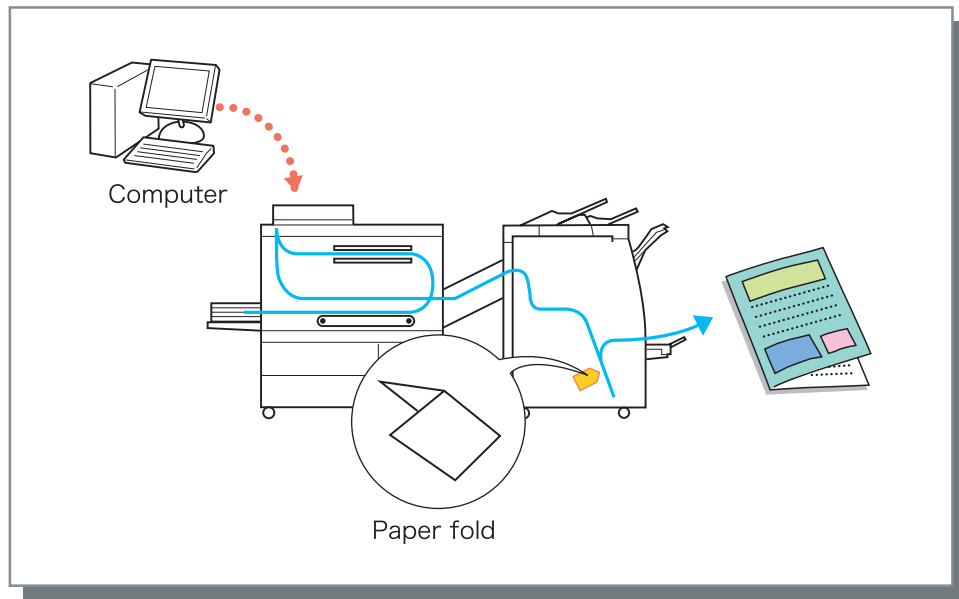

Either stapling or punching cannot be performed.

Booklet


Duplex printing of multiple continuous pages is performed with pagination, and the prints are folded in two to create a booklet. Centre binding by stapling can also be performed.



1

⦿ Paper Types That Can Be Used for Booklet

- Paper size and setting orientation:

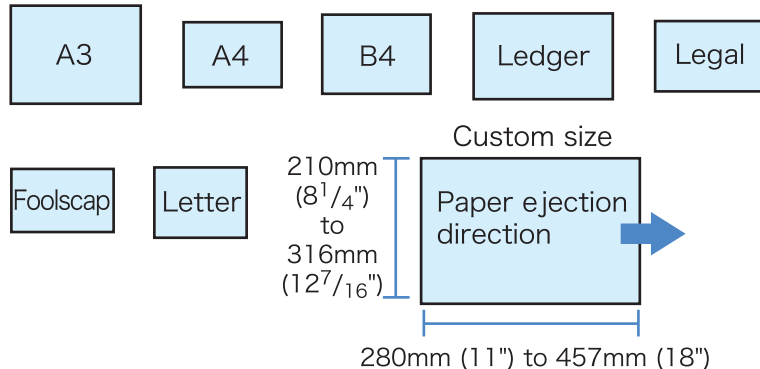

- Paper weight: 60g/m² to 90g/m² (16-lb bond to 24-lb bond) (up to 220g/m² [58.7-lb bond] for covers)

⦿ Maximum Stapling Capacity

The capacity is 60 pages (15 sheets) in total including covers.

⦿ Separate Books

When making a booklet of 16 sheets (61 pages) or more, the separate books setting is required.

- Auto: For fold and staple, prints are separated every 15 sheets (60 pages).
For only Fold, prints are separated every 5 sheets (20 pages).
- No. /sheets?: The number of sheets separated with the separate books function can be set.
The number can be set from 1 to 15 sheets (60 pages) for Fold and staple and from 1 to 5 sheets (20 pages) for Fold.



When creating a booklet from prints of 16 sheets (61 pages) or more, be sure to use the Separate books function. If [Separate books] is set to [OFF] for prints of 16 sheets (61 pages) or more, stapling is not performed and a booklet with an incorrect page order and fold is created.

⦿ Centre Binding Margin / Auto Reducing


To prevent the folding portions from hiding in 2-fold, a margin can be set at the centre of the folding portion.

The centre binding margin can be set from 0 mm to 50 mm (2") in 1 mm (0.04") increments.

Also the image can be automatically reduced so that the image is included in the image area.

⦿ Print Cover Separately

When adding a cover to a booklet, the cover and other pages can be printed separately.

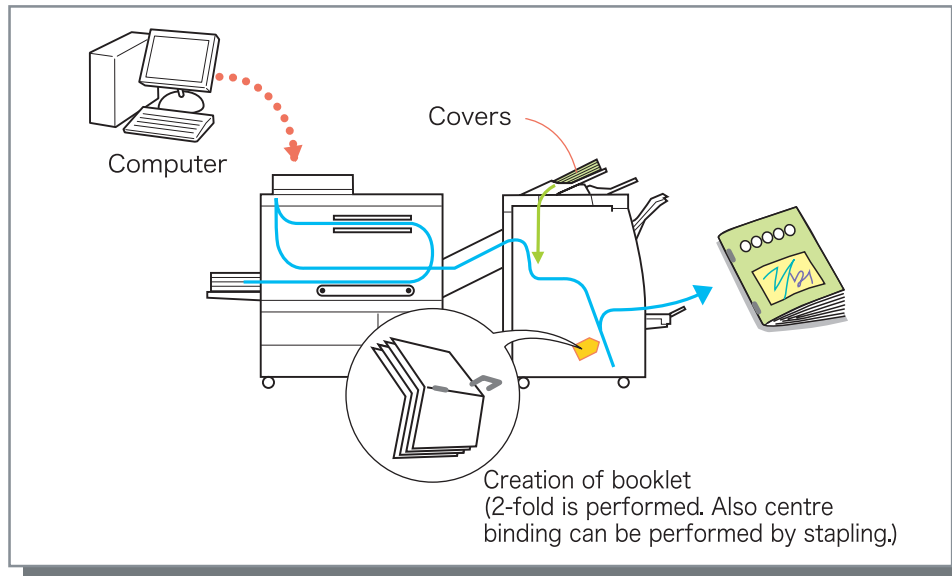

Method of Using the Booklet Tray


Up to 20 sets can be output to the Booklet tray.

When outputting a lot of booklets into the Booklet tray, pull out the plate and turn it down. Place a box or the like under the tray to store booklets.

To return the plate to its original position, raise the plate and slide it toward the Finisher.



- When the Booklet tray becomes full, a message appears in the display of the printer. Remove all the output booklets.
- The maximum number of sets that can be output depends on the paper size and the number of pages.

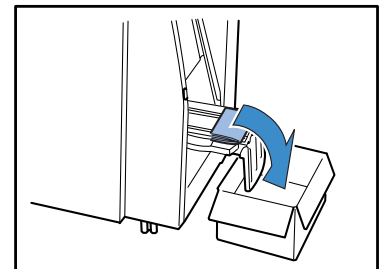

Output Tray

Use this function to set a tray to which prints are output. Normally, set this function to [Auto].

⦿ Settings

- Auto: An adequate tray is automatically selected according to the driver setting.
- Stacking Tray: Prints are output to the Stacking Tray. If the number of sheets to be output exceeds 500, select the Stacking Tray.
The size of paper that can be output to the Stacking Tray is 182 mm to 330mm x 182 mm to 488 mm ($7\frac{3}{16}$ " to 13" x $7\frac{3}{16}$ " to $19\frac{3}{16}$ ").
(for stapling: 203 mm to 297mm x 182 mm to 432 mm [8" to $11\frac{11}{16}$ " x $7\frac{3}{16}$ " to 17"])




If the following functions are set, [Stacking Tray] cannot be selected.

- Booklet:[Fold and staple] or [Fold] is selected.

Offset Output

Prints are output to the Stacking Tray at an offset position for each set.

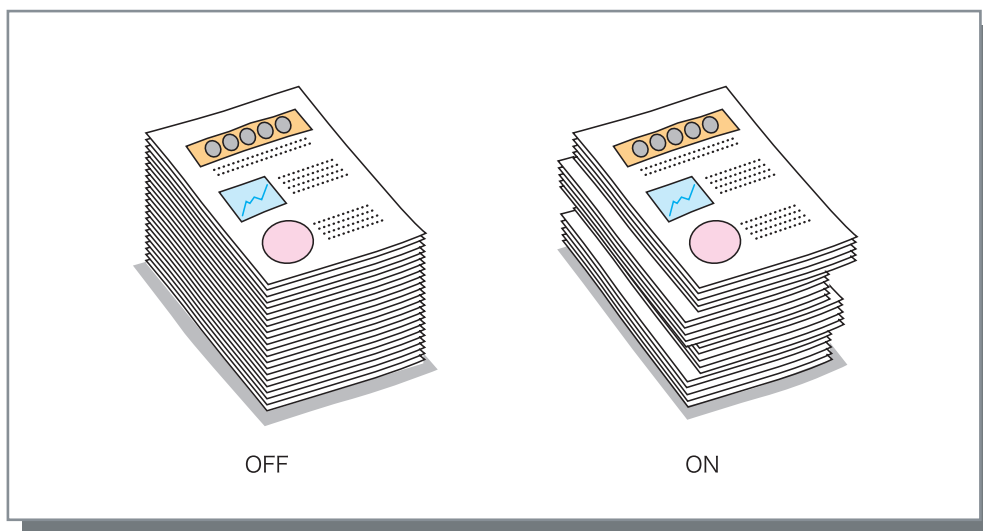

[Offset output] is a function of the Stacking Tray. This function cannot be used with functions that do not use the Stacking Tray such as Booklet. The [Job separation] function on the [Option] tab of the printer driver cannot be used with this function either.

⦿ Paper Types That Can Be Used for Offset Output

- Paper size: 203mm (8") to 297mm ($11\frac{11}{16}$ ")

182mm ($7\frac{3}{16}$ ") to 460mm ($18\frac{1}{8}$ ")
(for stapling: 182mm ($7\frac{3}{16}$ ") to 432mm (17"))
- Paper weight: 46g/m² - 210g/m² (12-lb bond to 56-lb bond) (60g/m² to 220g/m² [16-lb bond to 58.7-lb bond] for cover sheet)

Example of Operation with Finisher


Example 1: Preparation of Stapled Material for Meeting

Staple two or more sheets of paper like the conference material etc.



Procedure for preparing the following material is described here.

- Stapling at left top 1 position
- Offset output for each set
- Binding margin width: 10 mm ($\frac{3}{8}$ ") (with auto reducing)

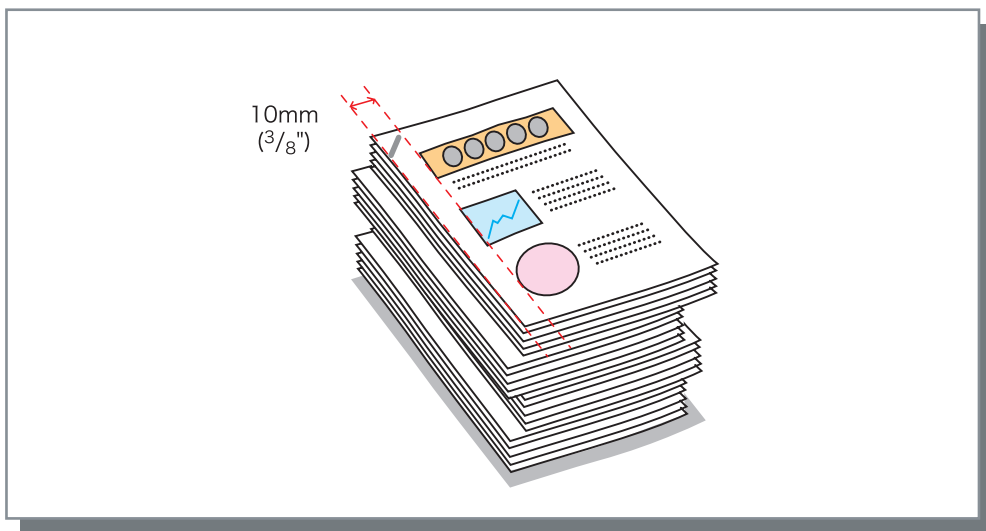


Printed sheets or other sheets of paper can be added as front covers and back covers.

p.2


1 Prepare data to be printed.

2 Display the [Print] dialog box.

Select [Print] from the [File] menu.

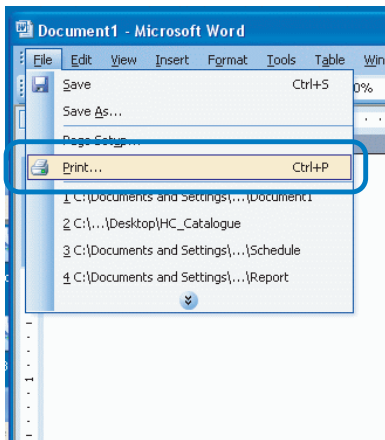


3 Enter the Number of copies and click the [Properties] button.

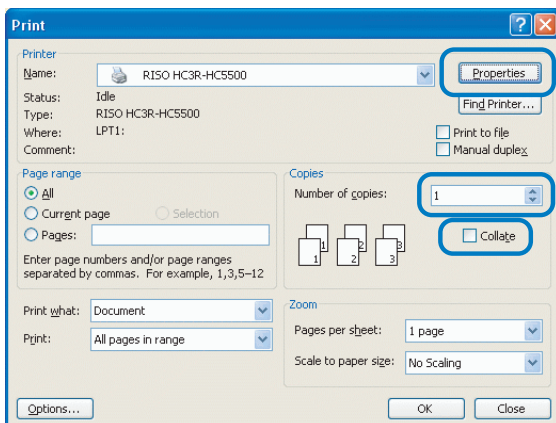

! Be sure to clear the checkmark from [Collate].
Set the ejection mode on the [Main setting] tab.


4 Set the following items on the [Finisher] tab.

- Stapler: Left top 1 position
- Offset output: ON

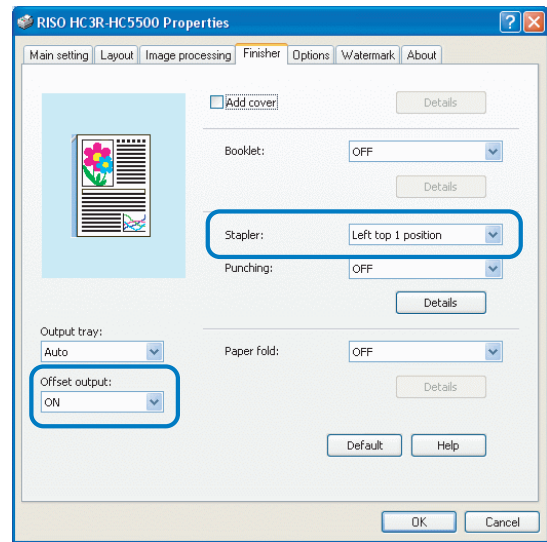

5 Click the [Details] button for [Stapler] and set the following items if you need.

- Put binding margin: Place a checkmark.
- Binding margin width: 10 mm ($\frac{3}{8}$ ")
- Auto reducing: Place a checkmark.

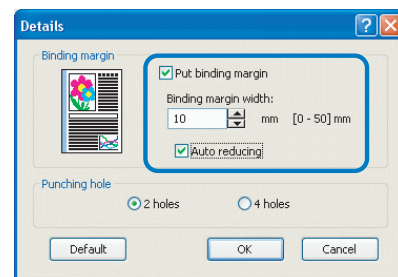


6 Perform printing.

Stapled prints are output into the Stacking Tray.
Since the prints are offset for each set, classification is easy.


Example 2: Creation of Booklet with Centre Binding

An example of procedure for creating twice-folded booklets such as pamphlet and catalog is described below. This procedure is useful for making travel pamphlets, advertisements, leaflets, handy manuals, and catalogs.

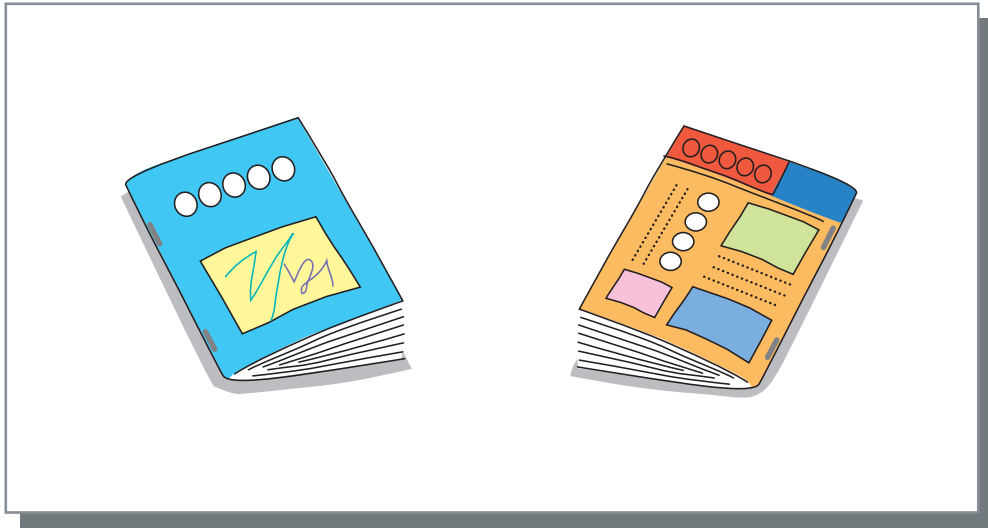

Procedure for creating the following booklets is described here.

- 2-fold and centre binding (Stapler)
- Centre binding margin: 10 mm ($\frac{3}{8}$ ") (auto reducing)

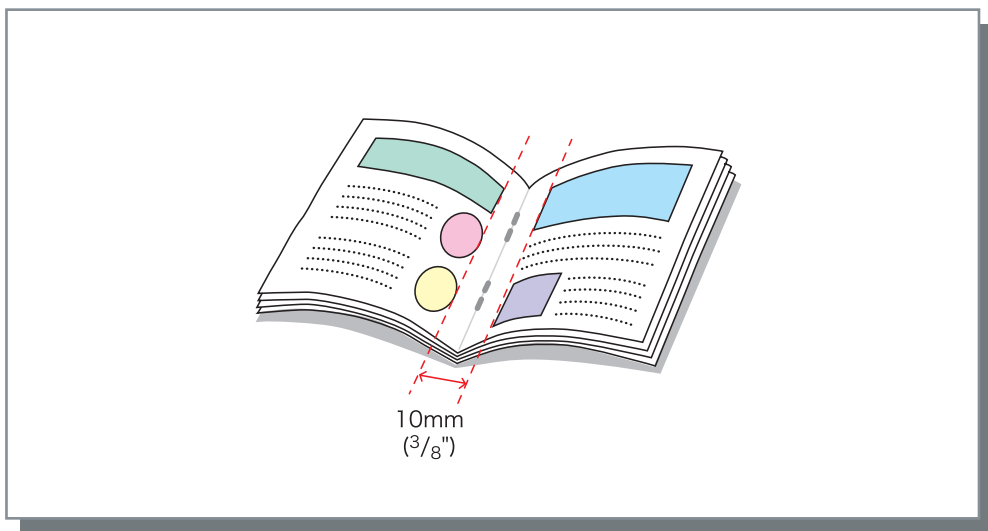


- The capacity for stapling is 60 pages (15 sheets) in total including covers.
 - Printed sheets or other sheets of paper can be added as the cover.
- ☞ p.2


1 Prepare data to be printed.

2 Display the [Print] dialog box.

Select [Print] from the [File] menu.

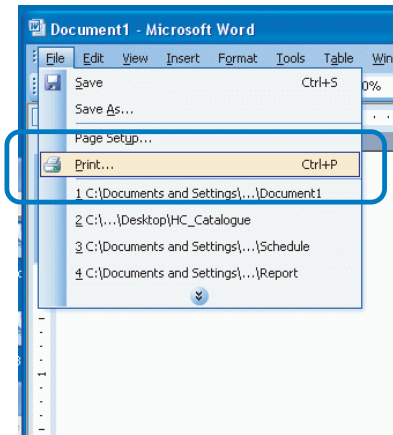

3 Enter the Number of copies and click the [Properties] button.

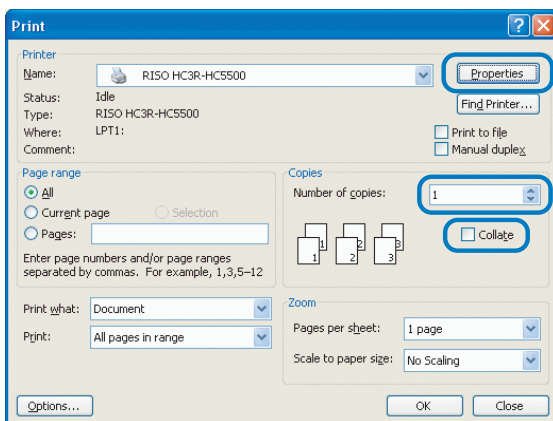


Be sure to clear the checkmark from [Collate].

Set the ejection mode on the [Main setting] tab.

4 Set the following item on the [Finisher] tab.


Booklet: Fold and Staple

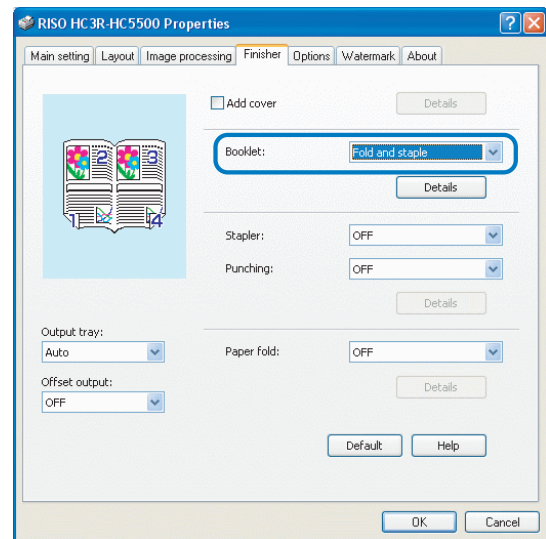

The printer driver performs automatically the optimum setting.

5 Click the [Details] button for [Booklet] and set the following items if you need.

- Put centre binding margin: Place a checkmark.
- Binding margin width: 10 mm ($\frac{3}{8}$ ")
- Auto reducing: Place a checkmark.

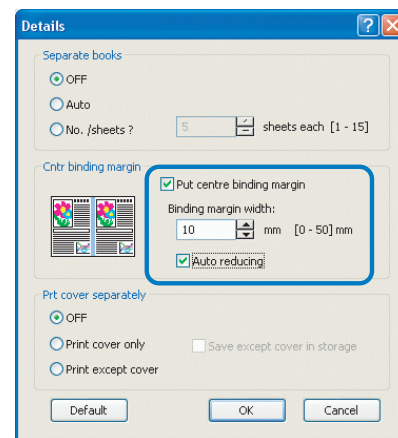


6 Perform printing.

Booklets with centre binding are output into the Booklet tray.

7 Press the Booklet eject button on the Finisher and remove the booklets.

The output booklets move to the right so that they can be easily removed.

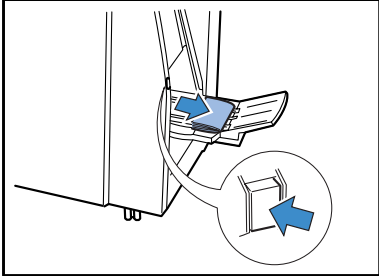

Example 3: Creation of Pamphlets with Inner 2-fold

Direct mail, advertisements, and leaflets are made by folding in two.



1

 Paper that can be used for the desired fold is set in a feed tray. p.11


Procedure for creating the following prints is described here.

- The original size is A4-R.
- Duplex printing is performed with the first page outside.


1 Prepare data to be printed.

2 Display the [Print] dialog box.

Select [Print] from the [File] menu.

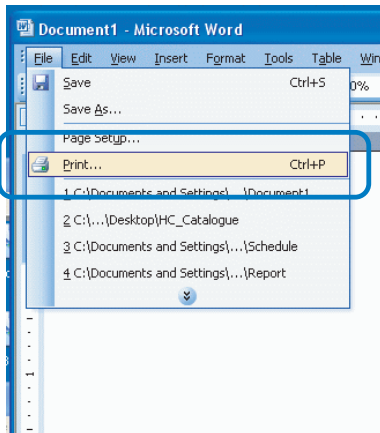


3 Enter the Number of copies and click the [Properties] button.

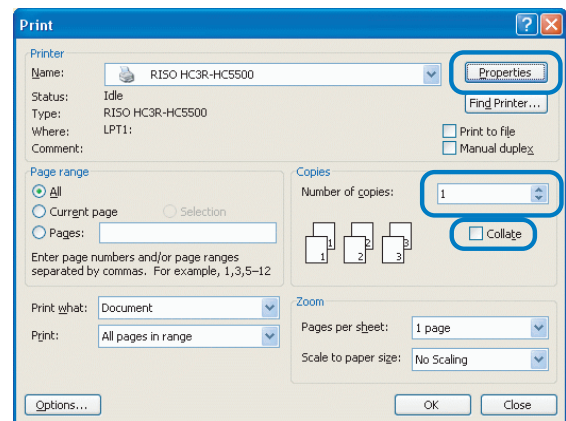

Be sure to clear the checkmark from [Collate].
Set the ejection mode on the [Main setting] tab.


4 Set the following item on the [Main setting] tab.

Duplex printing: Short edge binding

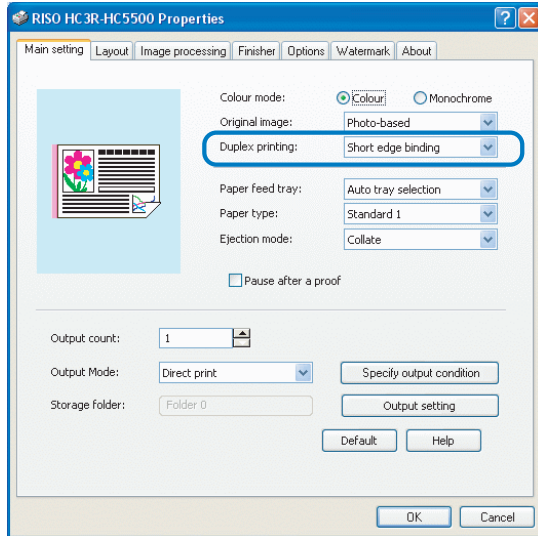


5 Set the following item on the [Finisher] tab.

Paper fold: fold

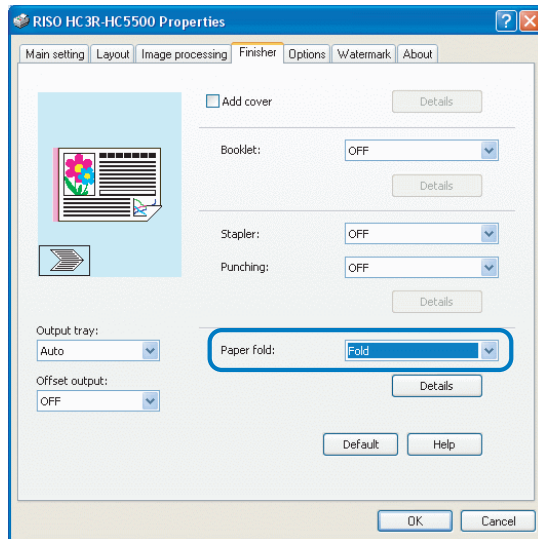

6 Click the [Details] button for [Paper fold] and set the following item.

Folding direction: Print outside

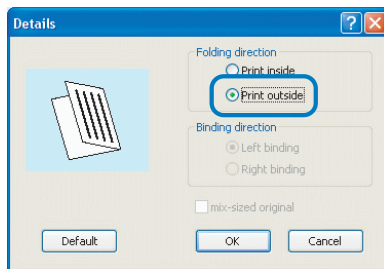


7 Perform printing.

The data is printed.


8 Press the Booklet eject button on the Finisher and remove the booklets.

The output booklets move to the right so that they can be easily removed.

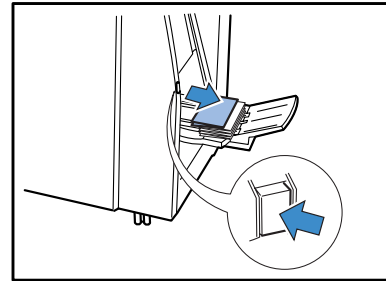

Chapter2 Troubleshooting


This chapter describes the method of removing jammed paper from inside the Finisher and the operation against jammed staples.



Explanation of Set Error Display

If trouble occurs in the Finisher during printing, printing stops and a symbol lights up on the Operation Panel of the printer or an error message appears in the display.

You can check the location based on the symbol or the number and see the information from the message in the display.

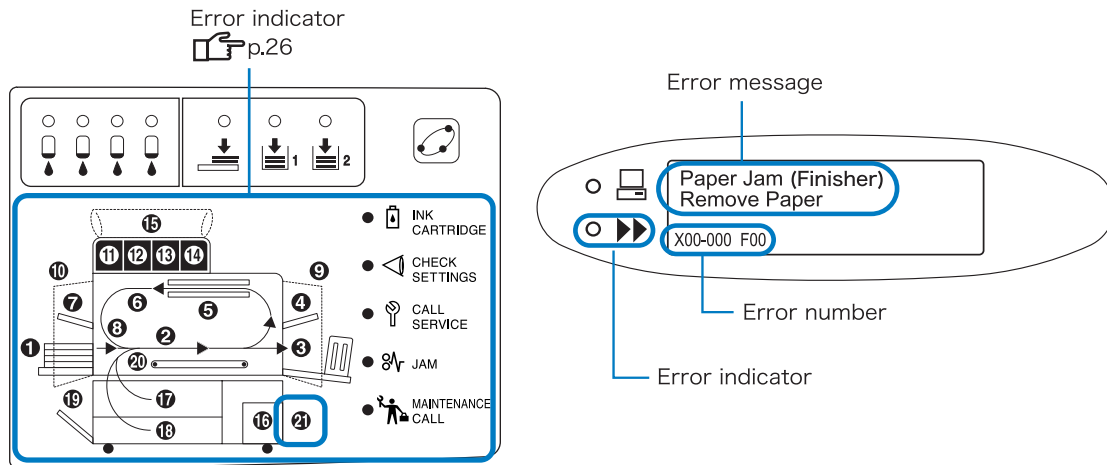

When an error occurs in the Finisher, error symbol 21 lights up.

If error symbol 1, 2 or 5 - 20 lights up, an error occurs in the printer. For measures against the error, refer to "HC5500 User's Manual for Printer Main Body."

Error Message and Error symbols


⦿ Error Number

Under a message in the display, an error number that consists of alphanumeric characters is displayed. The first letter of the error number indicates the error type.


The number of digits of the error number depends on the error location.

Example of Error Number	Description	
S00-000	Service Call	Displayed when inspection or repair by service personnel is required. Contact your local dealer (or service representative).
X00-000 F00	Jam Error	Displayed when a paper jam occurs in the Finisher.
X00-000 H00	Jam Error	Displayed when a paper jam occurs in the printer. For jammed paper removal, refer to "HC5500 User's Manual for Printer Main Body."
U00-000	Unit Error	Displayed when inspection or repair by service personnel is required. Contact your local dealer (or service representative).
Y00-000	Consumables Error	Displayed when the trash box in punching unit is full of chips by punching or staples run out.
Z00-000	Check Settings Error	Displayed when a cover or the like is not securely closed.
W00-000	Warning	Various warning messages are displayed.


Y00-000 Consumables Error

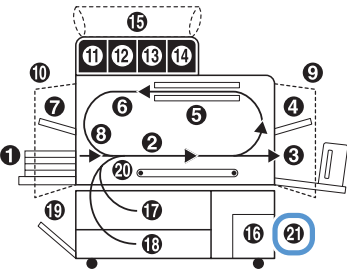Lighting location	Message	Solution
	Trash Box is Full Empty Trash Box in Punching Unit	Discard all chips from the trash box in punching unit.  p.48  If the CANCEL key is pressed, the machine except the relevant unit can be used.
	No Staples Set Staples in Stapler	Staples run out. Set new staples.  p.43  If the CANCEL key is pressed, the machine except the relevant unit can be used.
	No Staples Replace SaddleStitch Staple Cartridge	


Z00-000 Check Settings Error

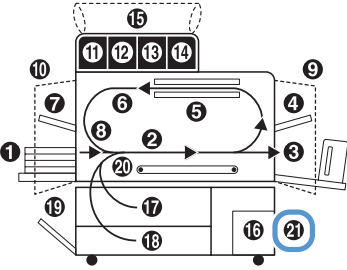Lighting location	Message	Solution
	! Finisher Error ! Close the Cover	A cover is not securely closed. Check the location indicated by the error number and close the cover securely.
	! Finisher Error ! Set Booklet Maker Unit in Place	The Booklet maker unit is not securely installed. Install the unit securely.


S00-000 Service Call


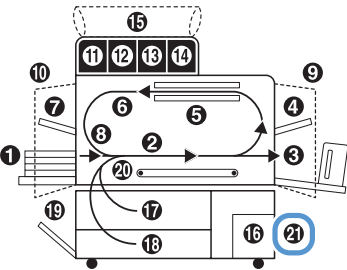
Lighting location	Message	Solution
	! System Error ! Restart Printer or Call Service	An error occurs in the Finisher. Turn off the power and on again. If the same message appears again, contact your local dealer (or service repre- sentative). At this time, tell the error number indicated in the message dis- play of the printer.

X00-000 Paper Jam Error

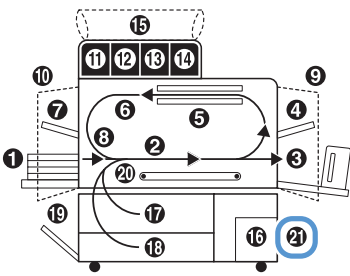Lighting location	Message	Solution
	Paper Jam (Finisher) Remove Paper	A paper jam occurs in the Finisher. Check the jam location and remove the paper. "Paper Jam"  p.28

U00-000 Unit Error

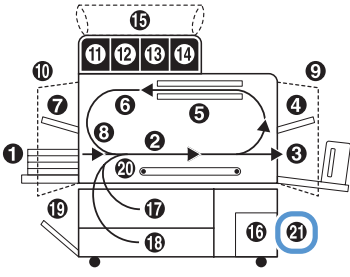Lighting location	Message	Solution
	! Finisher Error ! Restart Printer or Call Service	An error occurs in the Finisher. Turn off the power and on again. If the same message appears again, contact your local dealer (or service representative). At this time, tell the error number indicated in the message display of the printer.  If the CANCEL key is pressed, the machine except the relevant unit can be used.

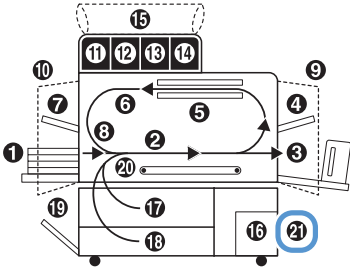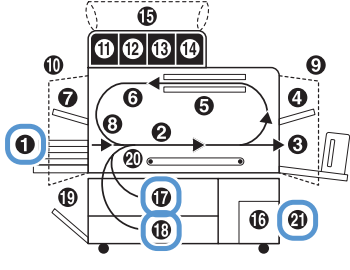Lighting location	Message	Solution
	No Paper (Finisher) Load Paper in Cover Sheet Tray	Paper in the Cover Sheet Tray runs out. Load paper in the tray.
	Paper Overloaded Remove Paper in Paper Receiving Tray	The paper capacity is exceeded. Remove paper and press the CANCEL key.
	! Finisher Error ! Check XXXXX xxxxx is a tray name or a unit name	An error occurs in the Finisher. Turn off the power and on again. If the same message appears again, contact your local dealer (or service representative). At this time, tell the error number indicated in the message display of the printer.
	! Finisher Error ! Restart Printer or Call Service	 If the CANCEL key is pressed, the machine except the relevant unit can be used.
	Paper Size Mismatch Load Paper in Interposer Tray	Paper in the Cover Sheet Tray does not match the paper size specified by the printer driver. Load proper paper and check the Operation Panel of the printer for the paper size that has been set in "Menu 4.11 Cover Sheet Tray." ☞ "HC5500 User's Manual for Printer Main Body"
	No Paper Load Paper in Interposer Tray	Paper in the Interposer Tray runs out. Load paper in the tray.
	No Paper Select Interposer Tray	"Separation Paper" is set to "OFF" in the menu setting of the printer. To insert separation paper, select the desired tray in "5.3 Separation Paper" of the menu setting. ☞ "HC5500 User's Manual for Printer Main Body."

Paper Jam Occurs

If a paper jam occurs in the Finisher or in the printer, printing stops and the jam location is indicated on the Operation Panel and the optional touch panel. In this case, remove the jammed paper and resume printing.

Since this printer performs high speed paper feeding and output, paper jams may occur at multiple locations. In this case, remove all the jammed paper.




Gently remove the jammed paper. Take care not to leave pieces of paper inside the printer and the Finisher.

Paper Jam Location

Details of the locations indicated on the Operation Panel and the optional touch panel display are shown below.

● Operation Panel of printer

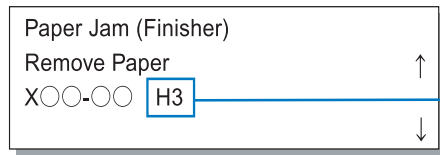


A number that indicates the paper jam location is displayed.

H1~H20 : In the printer

F1~F17 : In the Finisher

● PS7R touch panel (optional)

As shown in the figure below, numbers that indicate paper jam locations are indicated on the screen. Touch the number to display the method of removing jammed paper.

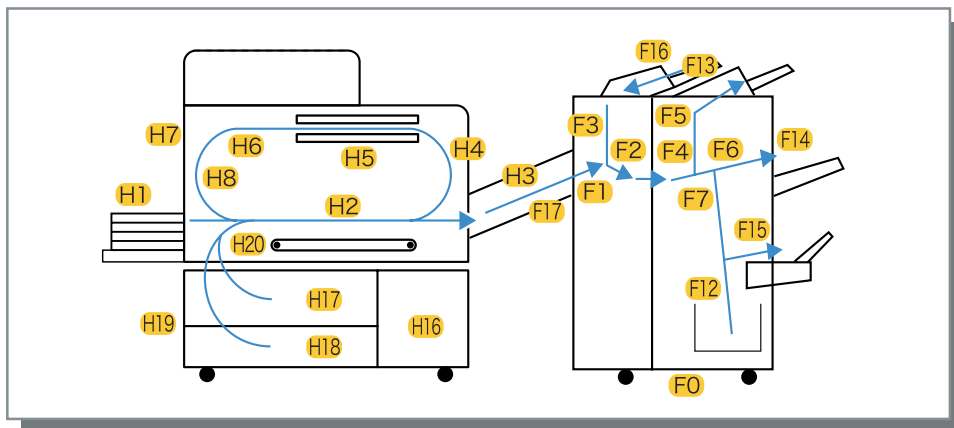

Remove all jammed paper until all the paper jam indicators are cleared because paper remains if any indicator is displayed. After removing jammed paper, close the covers of the printer and the Finisher and check that all paper jam location display is cleared on the Operation Panel of the printer and on the optional touch panel display.



For removing jammed paper from the printer (when H1 - H20 is lit), refer to "HC5500 User's Manual for Printer Main Body."


For detailed procedure for removing jammed paper, refer to the respective indicated pages.

Jam location		Page referred to
Printer	H3 Paper Receiving section	☞ p.30
	H4 Right Transfer Path Cover	☞ p.30
Finisher	F1	☞ p.31
	F2	☞ p.32
	F3	☞ p.33
	F4	☞ p.34
	F5	☞ p.35
	F6	☞ p.36
	F7	☞ p.37
	F12	☞ p.38
	F13	☞ p.39
	F14	☞ p.39
	F15	☞ p.40
	F16	☞ p.41
	F17	☞ p.42


 F8 - F11 are not displayed.

H3 Paper Jam in the Paper Receiving Section

- 1 Open the Transfer Cover.

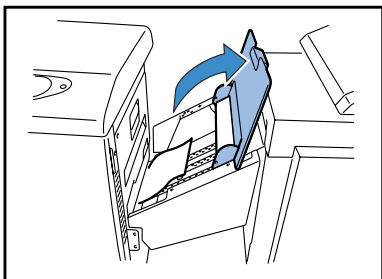


- 2 Pull out and remove the jammed paper.

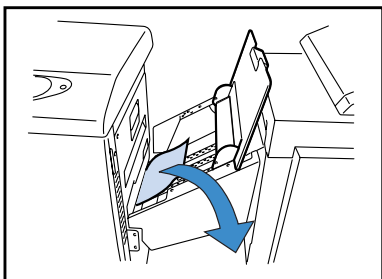


! If it is not easy to pull out the paper, open the Front Cover of the printer and remove the paper from the side of the Transfer Roller because the paper might be torn.

- 3 Close the Transfer Cover.

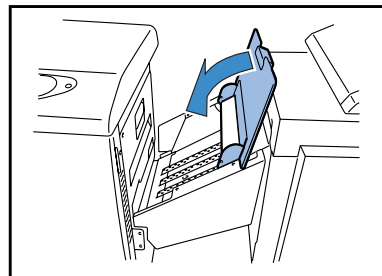


H4 Paper Jam at the Right Transfer Path Cover


- 1 Open the Transfer Cover.

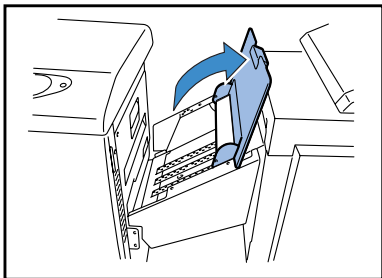


- 2 Open the Right Transfer Path Cover.

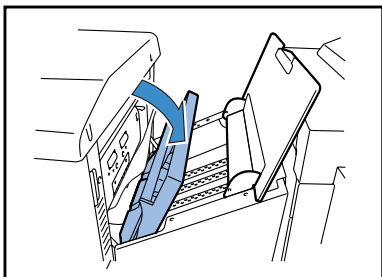


- 3 Remove the jammed paper.

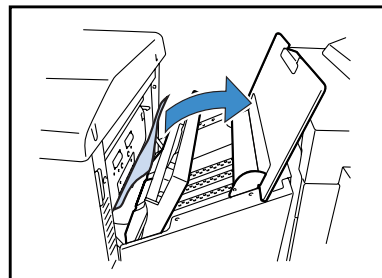


- 4 Return the covers to their original positions.

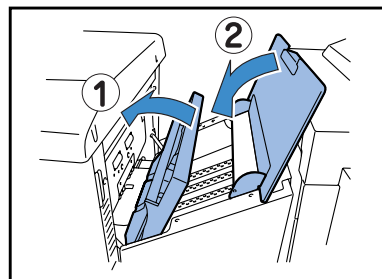


1 Open the covers.

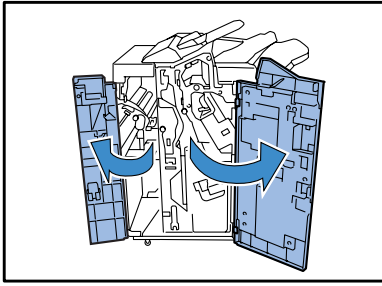


2 Open [1a] downward.

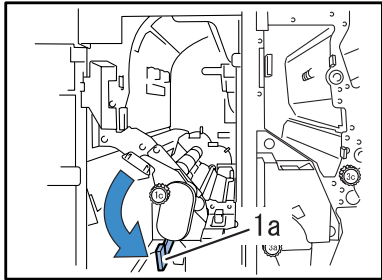


3 Remove the jammed paper.

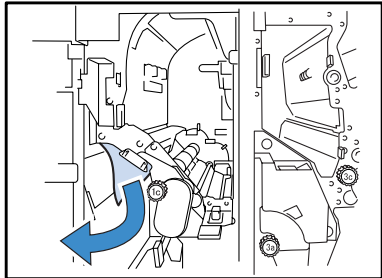


4 If it is not easy to pull out the paper, open the Transfer Cover and remove the jammed paper.

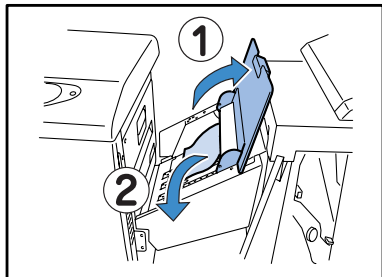


5 Return [1a] to its original position.

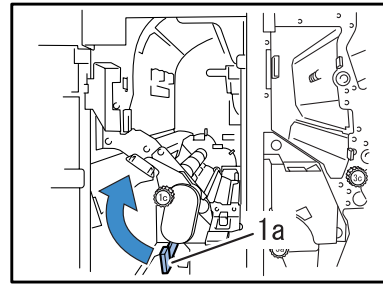


6 Close the covers.

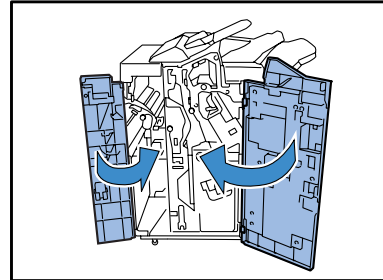


- 1 Open the covers.

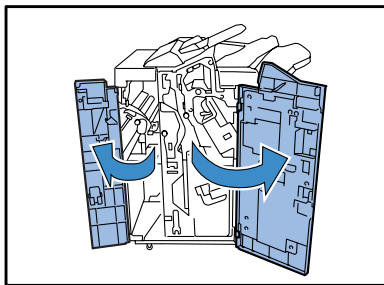


- 2 Open [1a] downward and remove the jammed paper while turning [1c] counterclockwise.

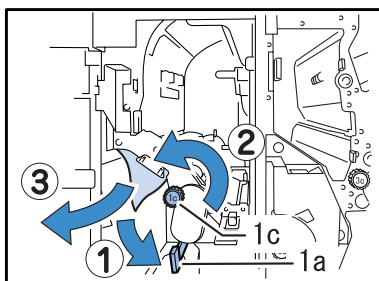


- 3 If it is not easy to pull out the paper, raise [1d] to lock it.

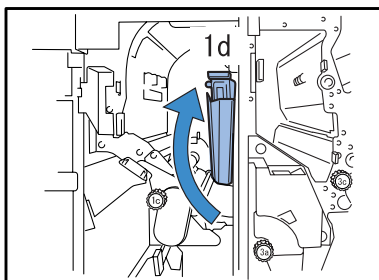


- 4 While turning [1c] clockwise, remove the jammed paper.

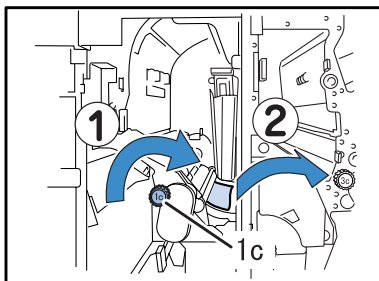


- 5 Return [1a] and [1d] to their original positions.

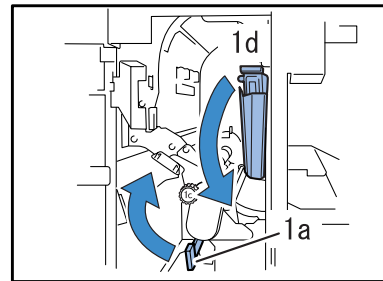


- 6 Close the covers.

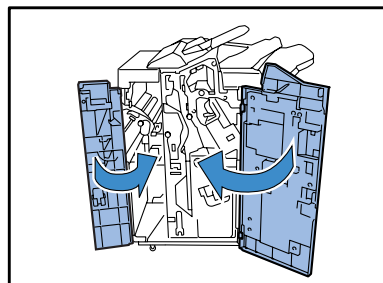


- 1** Open the covers.

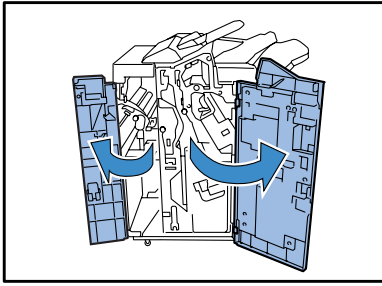


- 2** Open [1b] to the right and remove the jammed paper.

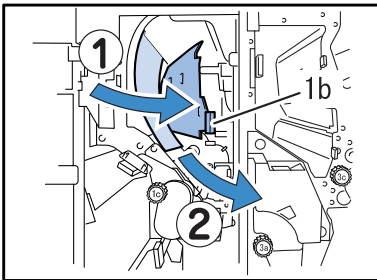


- 3** If it is not easy to pull out the paper, raise [1d] to lock it.

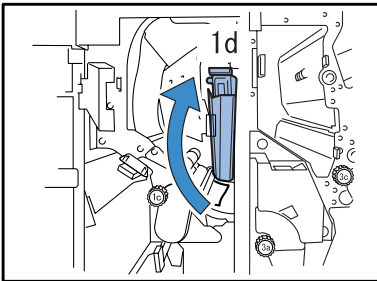


- 4** While turning [1c] clockwise, remove the jammed paper.

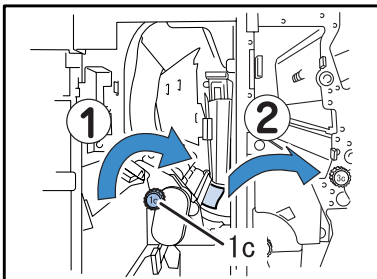


- 5** Return [1b] and [1d] to their original positions.

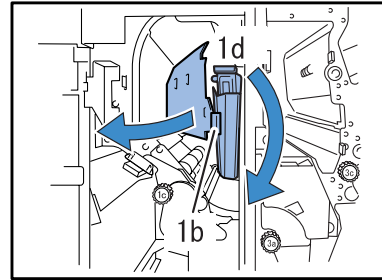


- 6** Close the covers.

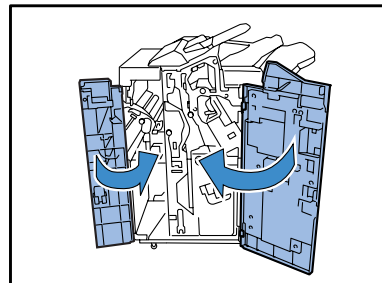


- 1 Open the covers.

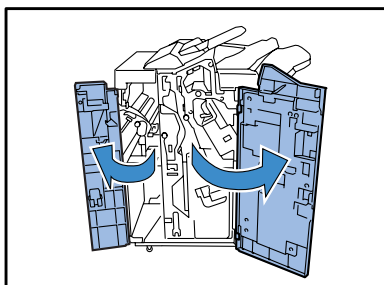


- 2 Open [3d] and [3b] to the left and remove the jammed paper.

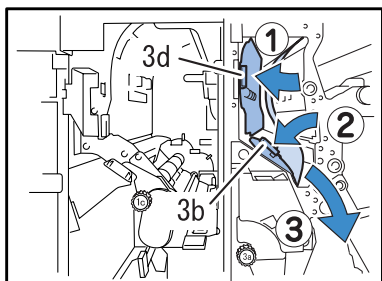


- 3 If it is not easy to pull out the paper, raise [1d] to lock it.

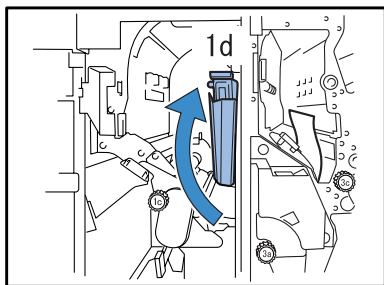


- 4 While turning [3a] clockwise, remove the jammed paper.

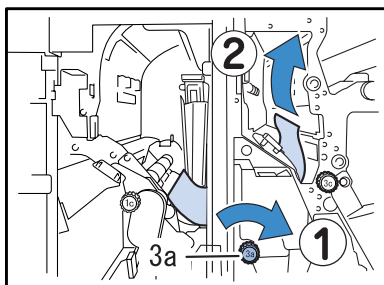


- 5 Return [1d] and [3b] to their original positions and then return [3d] to its original position.

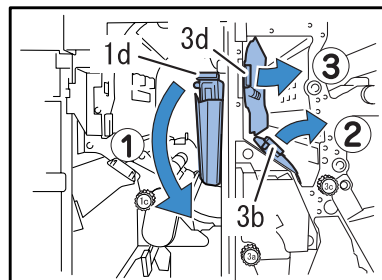


- 6 Close the covers.

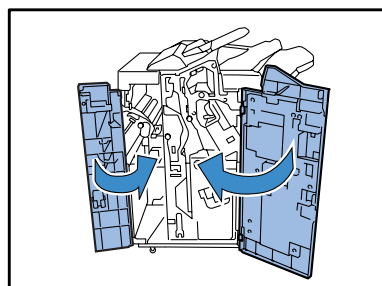


- 1** Open the covers.

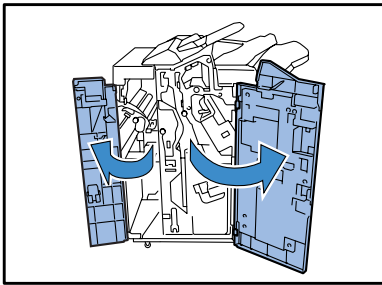


- 2** Open [3e] downward.

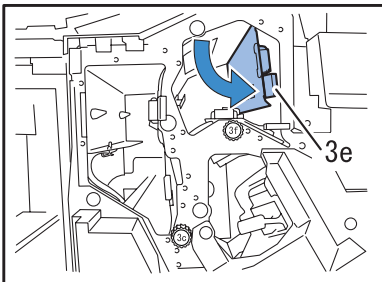


- 3** While turning [3c] clockwise, remove the jammed paper.

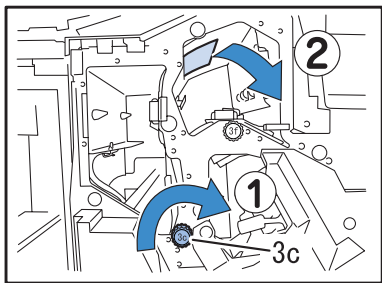


- 4** If it is not easy to pull out the paper, open [3d] and [3b] to the left, and remove the jammed paper.

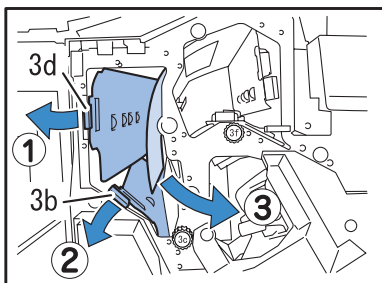


- 5** Return [3b] to its original position and then return [3d] and [3e] to their original positions.

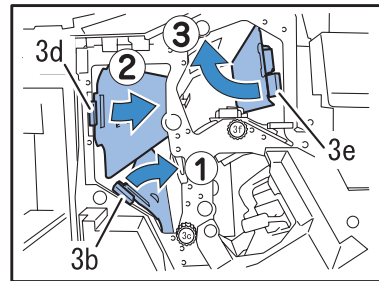


- 6** Close the covers.

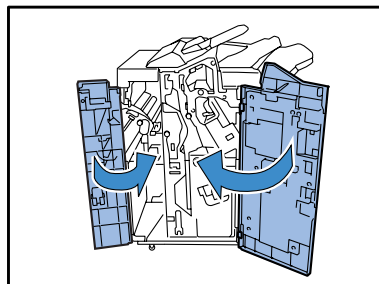


1 Open the covers.

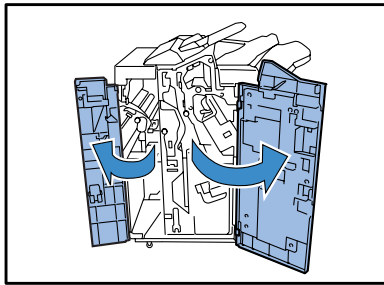


2 Raise [3g] to lock it.

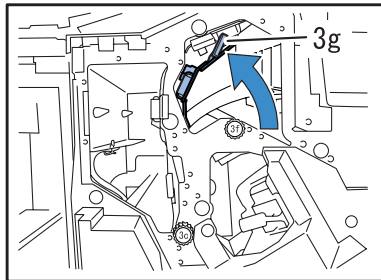


3 While turning [3f] clockwise, remove the jammed paper.

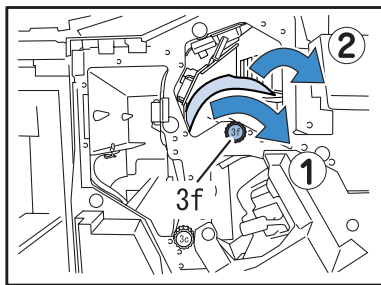


4 Return [3g] to its original position.

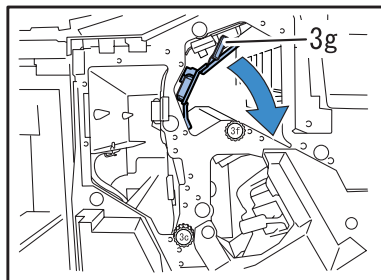


5 Close the covers.

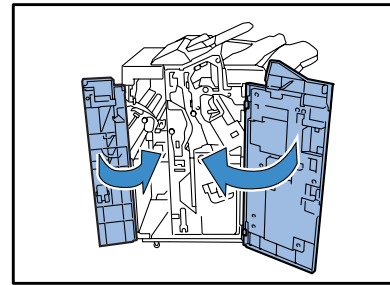


1 Open the covers.

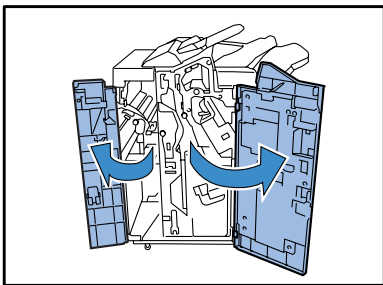


2 Open [4b] to the left.

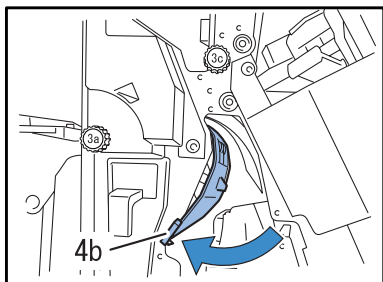


3 While turning [3a] clockwise, remove the jammed paper.

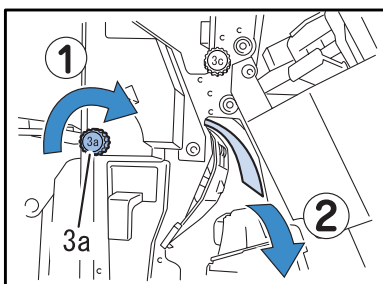


4 Return [4b] to its original position.

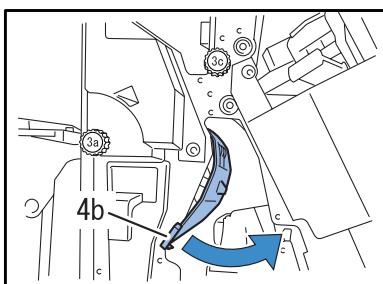


5 Close the covers.

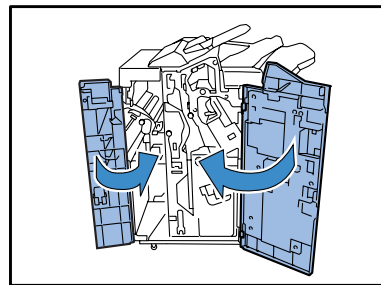


- 1 Open the covers.

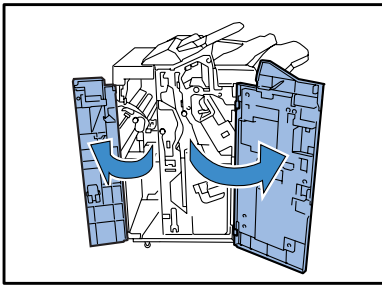


- 2 Pull out the Booklet maker unit [4] to the front side.

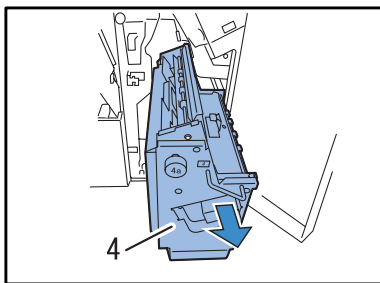


- 3 Turn [4a] until no paper comes out.

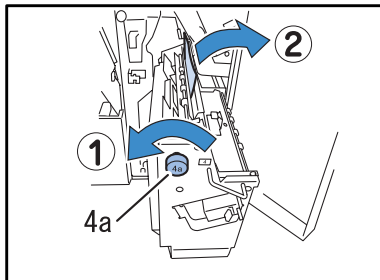


- 4 Grasp and pull the green tab to open the cover and remove the jammed paper.

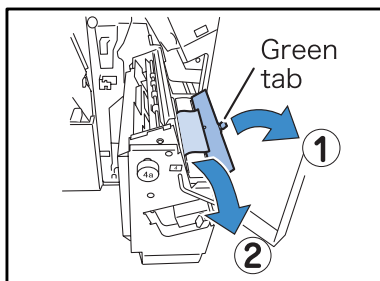

- 5 Return the green tab to its original position and return the Booklet maker unit [4] to its original position.

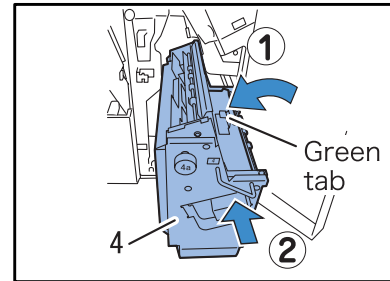


- 6 Close the covers.

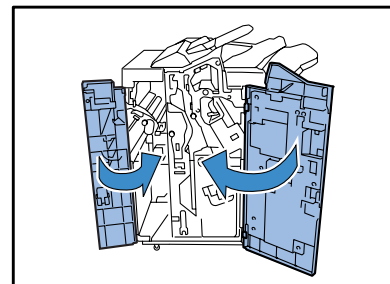


F13

- 1 Remove the paper jammed in the Top Tray.

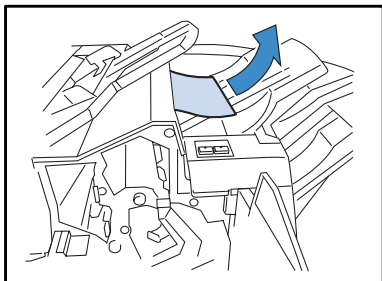


- 2 Open and close the covers.

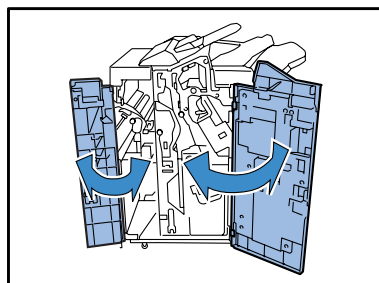


2

F14


- 1 Remove the paper jammed in the Stacking Tray.

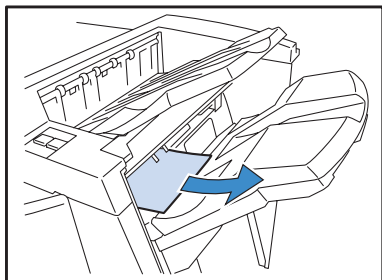


- 2 Open and close the covers.

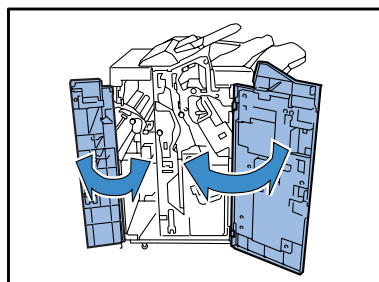


1 Open the covers.

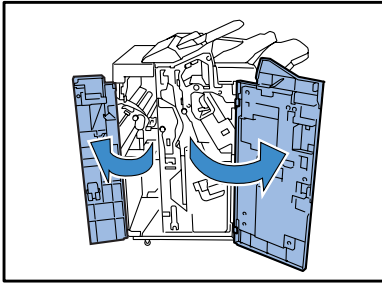


2 Turn [4a] clockwise until no paper comes out into the Booklet tray.

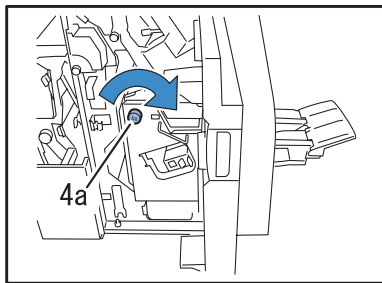


3 Close the covers.

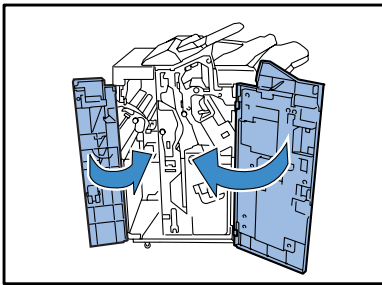


- 1** Press the cover button [1e] located on the Cover Sheet Tray to open the cover and remove the jammed paper.

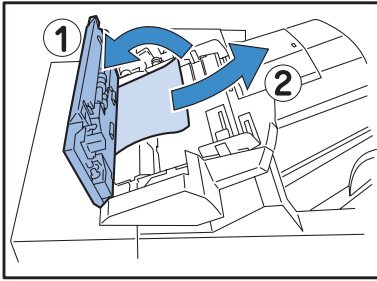


- 2** If it is not easy to pull out the paper, open the left cover.

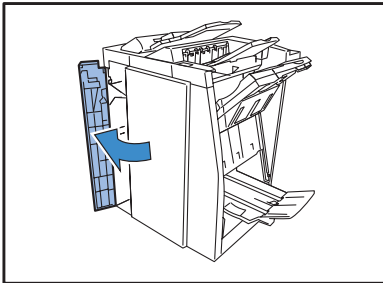


- 3** Open [1b] to the right and remove the jammed paper.

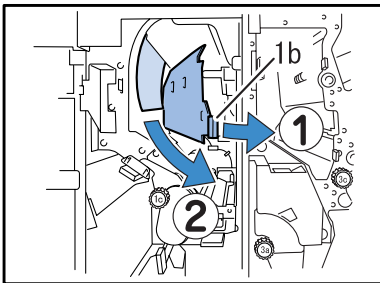


- 4** Return [1b] to its original position.


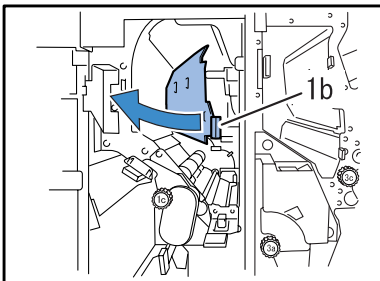


- 5** Close the left cover.

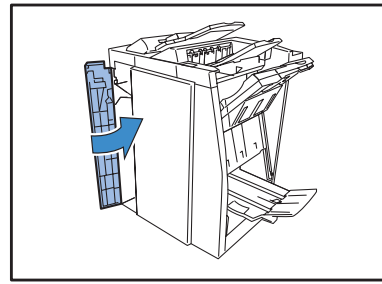


- 6** Return the cover of the Cover Sheet Tray to its original position.

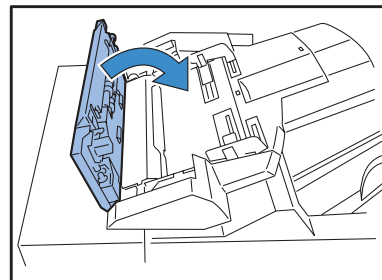

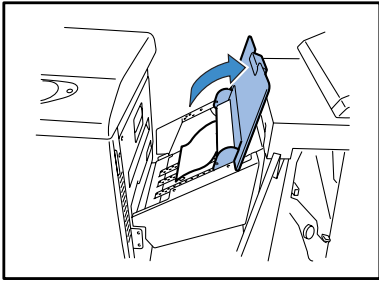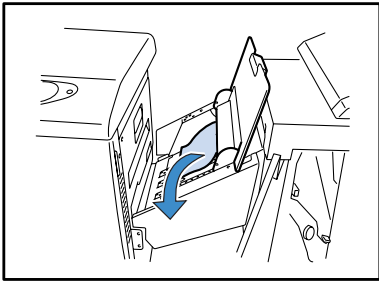1 Open the Transfer Cover.**2 Pull out and remove the jammed paper.**

! If it is not easy to pull out the paper, do not pull it forcibly because the paper might be torn. In this case, open the left cover of the Finisher and remove the paper from the side of the Transfer Roller.

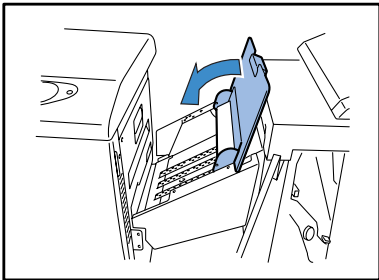
3 Close the Transfer Cover.

Staples Run Out


When staples run out, printing stops and a message appears in the printer display. Check the message and insert new staples using the following procedure.

For Stapler Cartridge UR1


- 1 Open the cover.

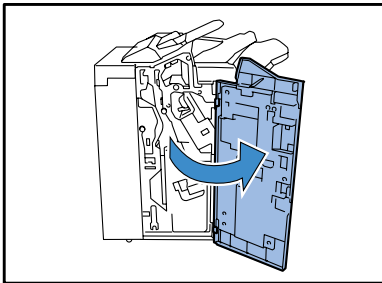


- 2 Hold the handle of the cartridge and pull it to the front and up a little.

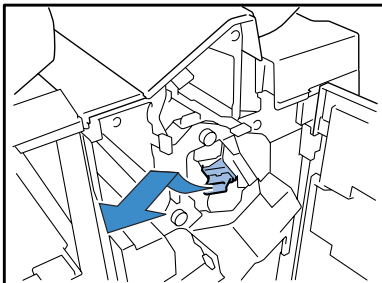


- 3 Press the points indicated by the arrows (1) to flip open the cover of the cartridge (2) and remove the staple case (3).

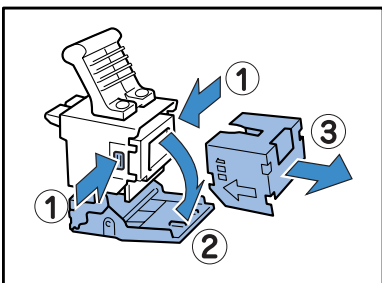


- 4 Insert a new staple case into the cartridge.

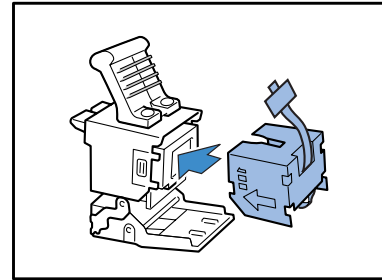

- 5 Remove the sealing tape from the staple case.

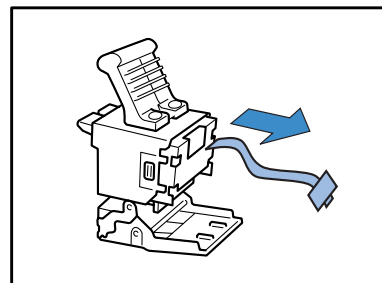


- 6 Close the cover of the cartridge.

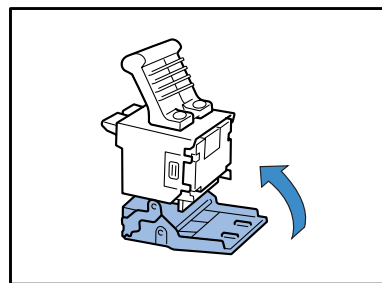


2

7 Return the cartridge to its original position.

Push the cartridge in until it clicks.

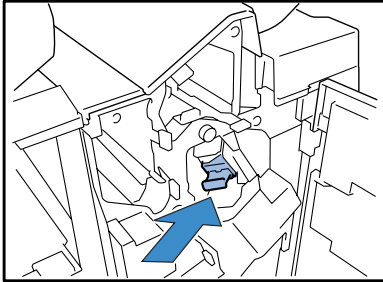


8 Close the cover.

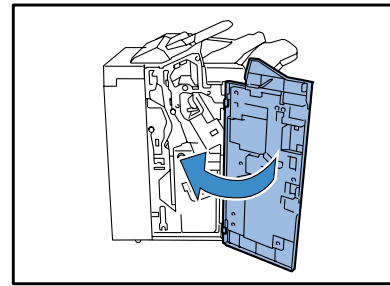


For Stapler Cartridge UR2 or UR3


1 Open the cover.

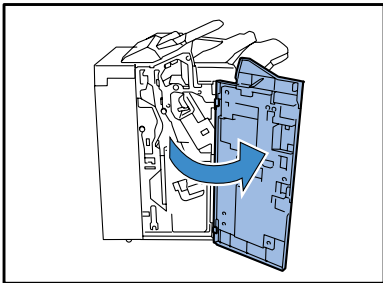

2 While pressing the lever to the right, pull out the unit to the front.

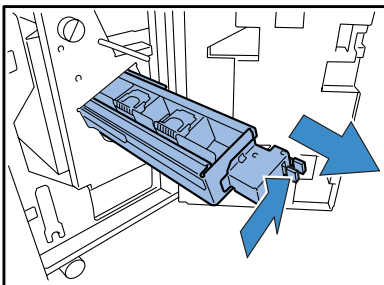


3 Hold the tabs located on both sides of the cartridge and lift the cartridge to the upper left.

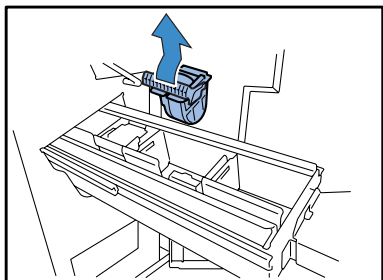


4 Hold the tabs located on both sides of the new cartridge and insert the cartridge into the unit.


Press the cartridge down until it clicks.

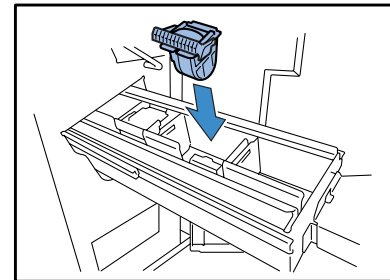

5 Return the unit to its original position.

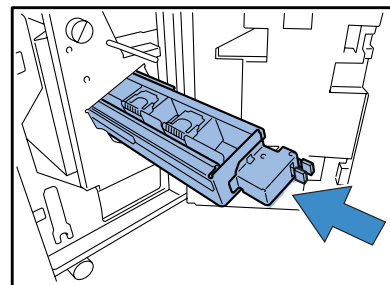


6 Close the cover.

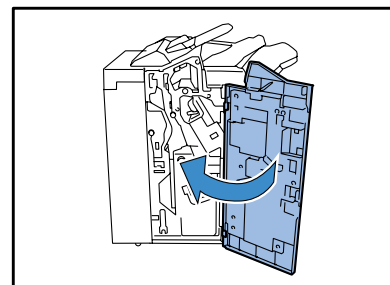

Stapling Cannot Be Performed Properly


This section describes the measures against stapling failure.

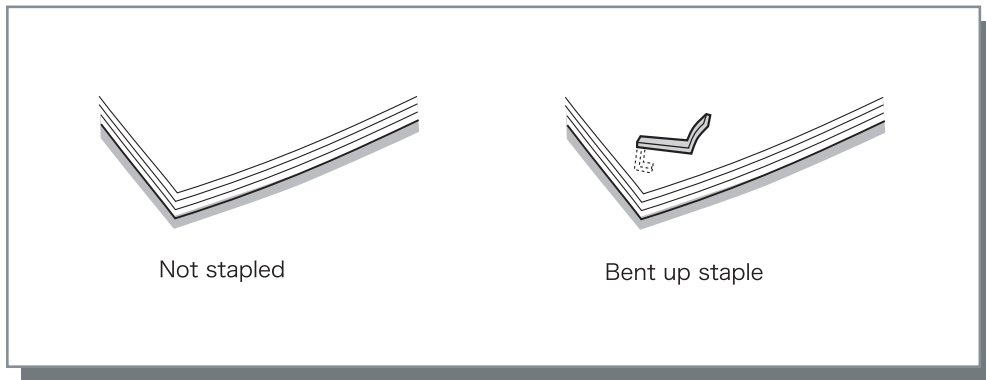

2




When stapling results in these problems, contact your local dealer (or service representative).

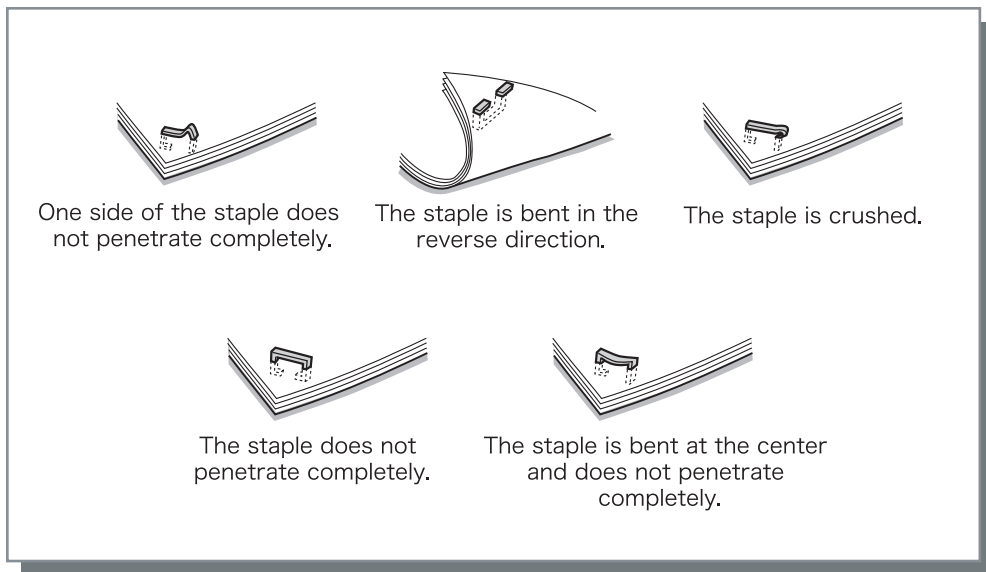


For Stapler Cartridge UR1


- 1** Open the cover.

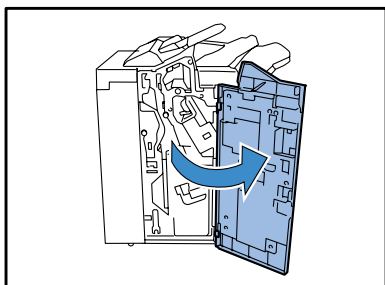

- 2** Hold the handle of the cartridge and pull it to the front side to remove while raising it a little.

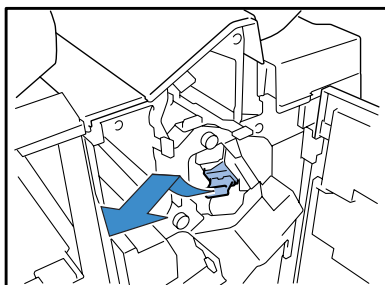


- 3** Open the cover of the cartridge and remove the jammed staple.

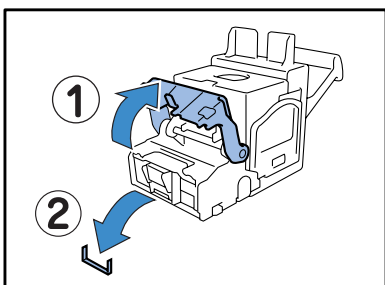

⚠ CAUTION


Take care not to injure your fingers or the like.

- 4** If the jammed staple cannot be removed, press the bottom of the cartridge in the direction indicated by the arrow to remove the staple.

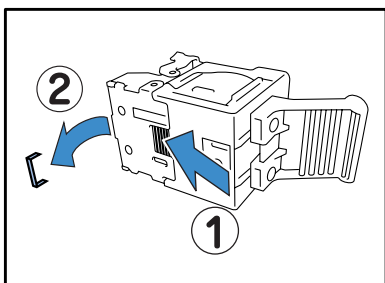


- 5** Return the cartridge to its original position.

Press the cartridge down until it clicks.

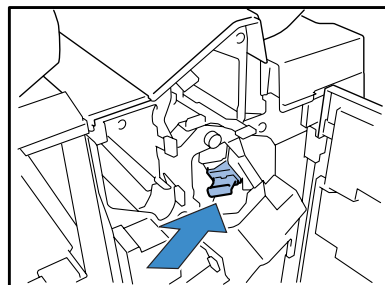


- 6** Close the cover.

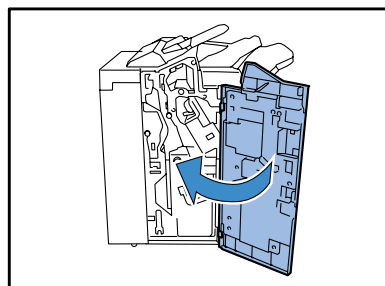


For Stapler Cartridge UR2 or UR3


- 1** Open the cover.

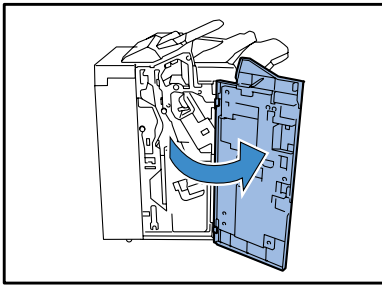


- 2** While pressing the lever to the right, pull out the unit to the front side.

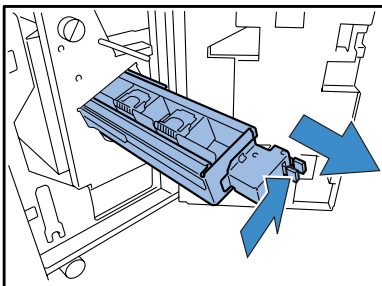

- 3** Hold the tabs located on both sides of the cartridge and lift the cartridge to the upper left.

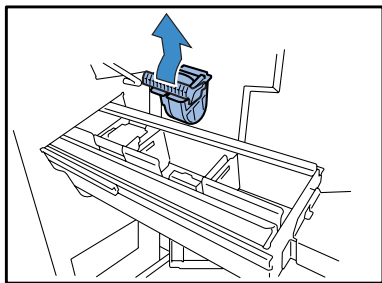


- 4** Remove the jammed staple.

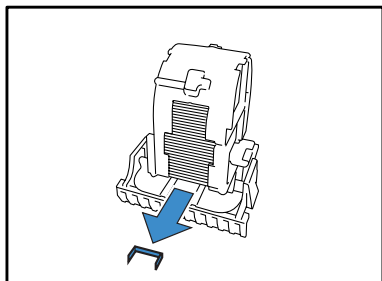


CAUTION
Take care not to injure your fingers or the like.

- 5** Hold the tabs located on both sides of the cartridge and return the cartridge to the unit as it was.


Press the cartridge down until it clicks.

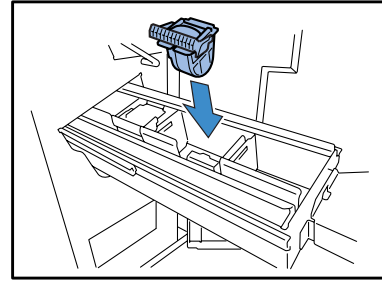

- 6** Return the unit to its original position.

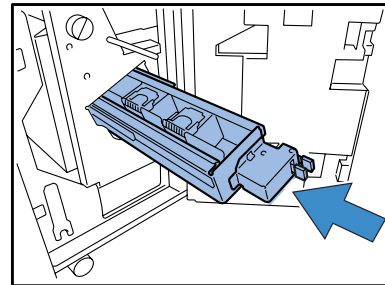

- 7** Close the cover.

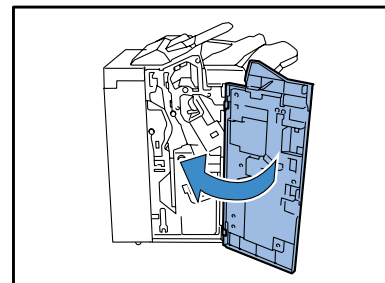


The Trash Box in Punching Unit is Full of Punch Dust

If the trash box in punching unit becomes full of chips (punch dust), printing stops and a message appears in the display of the printer. Check the message and remove the trash box in punching unit to discard the chips.




- When the trash box is removed, be sure to discard all the chips. If chips remain, the box becomes full of chips before the message indicating replacement is displayed, resulting in failure.
- Be sure to perform this operation while the printer power is on. When the printer is in the Stand-by mode or Sleep mode, press the Wake-Up Key or Sleep Key on the operation panel to turn on the printer power. If not, the printer cannot recognize that the trash box in punching unit is emptied.

1 Open the cover.

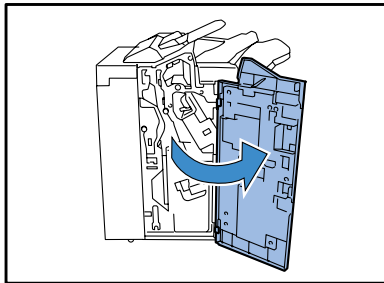


2 Pull out the trash box in punching unit to the front side to remove it.

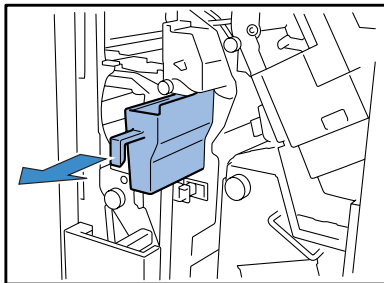


3 Discard all the chips.


Check that no chip remains in the trash box.

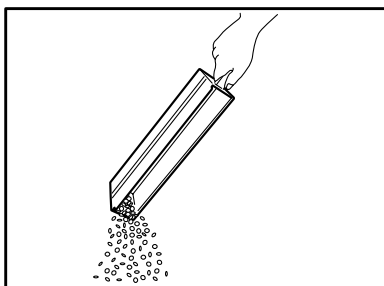

4 Return the trash box in punching unit to its original position.

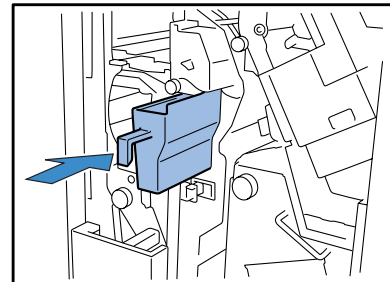

5 Close the cover.

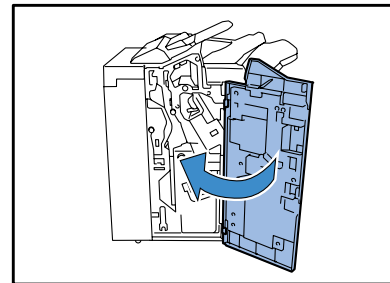

The Finisher Does Not Operate


Problem	Cause and Solution
The Finisher does not operate.	• Check to see if the power plug is properly inserted into the outlet. • Check to see if the printer is securely connected to this unit through the cord. • Check to see if the printer main power is on. If the power is off, turn on the power and then press the Sleep Key on the Operation Panel of the printer. • Turn off the printer power and then on again. Alternatively, restart the computer that is connected to the printer. If the Finisher does not operate nevertheless, contact your local dealer (or service representative).
An error occurs.	<u>An error occurs in the printer or the Finisher.</u> Check the error message displayed on the Operation Panel of the printer and take proper measures. "Chapter 3 Troubleshooting" of "HC5500 User's Manual for Printer Main Body" p.3-1

2

The Finisher Does Not Operate according to the Setting

Problem	Cause and Solution
Covers cannot be added.	<u>[Add cover] is not set in the printer driver.</u> Set [Add cover] on the [Finisher] tab in the printer driver. "Add cover" of "HC5500 User's Manual for Printer Driver" p.3-3
	<u>Paper is not loaded in the Cover Sheet Tray.</u> Check the paper types and the number of sheets that can be loaded in the Cover Sheet Tray and load the paper. "Add cover" p.2
	<u>Setting of the Cover Sheet Tray is not performed.</u> For loading paper in the Cover Sheet Tray, register the type of paper to be loaded using menu setting "4.11 Cover Sheet Tray" of the printer. "4.11 Cover Sheet Tray" of "HC5500 User's Manual for Printer Main Body" p.2-29 When registering, match the menu settings with the settings of [Output paper size] and [Paper type] of the printer driver. If the settings do not match, the printer judges that no paper is loaded and does not perform printing.
The orientation of the covers is different from the setting.	<u>The orientation of setting of the covers is different.</u> For adding covers to booklets, load the paper with the back side up and the first page to the left in the Cover Sheet Tray. For adding covers to prints other than booklets using stapling or punching, load the paper with the front side up and the stapling or punching position to the right. "Chapter 3 Troubleshooting" of "HC5500 User's Manual for Printer Main Body" p.3-1



Chapter3 Appendix



Consumables

About Consumables

You can check the status of printer operation and consumables on the [Monitoring screen] of RISO Console PS7R. For details, refer to "HC5500 User's Manual for Console."

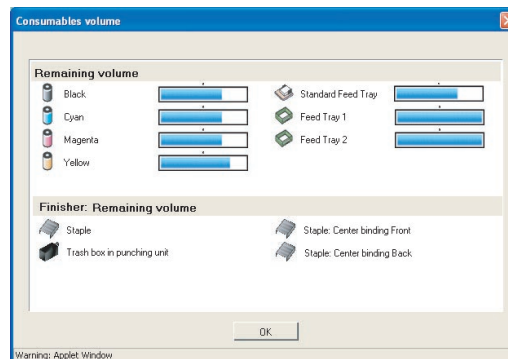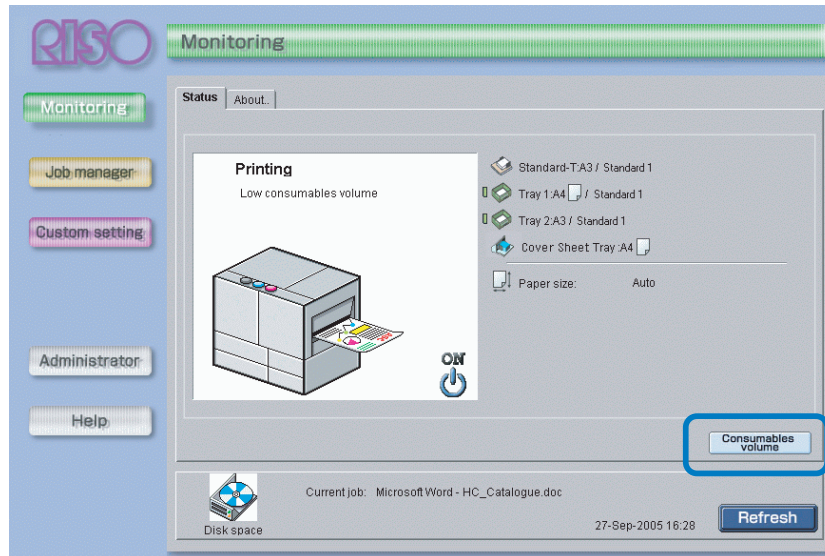

Types of Consumables

Type of staple	Quantity
HC STAPLE 100	5000 pcs. x 3 cases
HC STAPLE BOOKLET	5000 pcs. x 4 cases

! Use staples recommended by our company. Do not use improper consumables because they may cause failure or trouble.

Specifications

Tray System	Top Tray: Sorting, stacking Stacking Tray: Sorting, stacking (offset)
Paper Size	Top Tray: Max. A3W or equivalent (330 mm x 488 mm [13" x 19 ³ / ₁₆ "]) Min. 100 mm x 148 mm (4" x 5 ¹³ / ₁₆ ")
	Stacking Tray: 182 mm to 330mm x 182 mm to 488 mm (7 ³ / ₁₆ " to 13" x 7 ³ / ₁₆ " to 19 ³ / ₁₆ ") (*1)
	Use of Cover Sheet Tray: A3/A4/A4-R/B4/B5/B5-R/Ledger/Legal/Letter/Letter-R
	For stapling: A3/A4/A4-R/B4/B5-R/Ledger/Legal/Foolscap/Letter/Letter-R/ custom size entry (203mm to 297mm x 182 mm to 432 mm [8" to 11 ¹¹ / ₁₆ " x 7 ³ / ₁₆ " to 17"])
	For punching (2 holes): A3/A4/A4-R/B4/B5-R/Ledger/Legal/Letter-R
	For punching (3 holes): A3/A4-R/B4/B5-R/Ledger/Letter-R
	For punching (4 holes): A3/A4-R/Ledger/Letter-R
	For creation of booklet: A3/A4/B4/Ledger/Legal/Foolscap/Letter/ custom size entry (210 mm to 316mm x 280 mm to 457 mm [8 ¹ / ₄ " to 12 ⁷ / ₁₆ " x 11" to 18"])
	For offset output: 203mm to 297mm x 182 mm to 460 mm (8" to 11 ¹¹ / ₁₆ " x 7 ³ / ₁₆ " to 18 ¹ / ₈ ") (For stapling: 203mm to 297mm x 182 mm to 432 mm (8" to 11 ¹¹ / ₁₆ " x 7 ³ / ₁₆ " to 17"))
Paper Weight	Cover Sheet Tray: 60 to 220g/m ² (16-lb bond to 58.7-lb bond)
	Top Tray: 46 to 210g/m ² (12-lb bond to 56-lb bond) paper, postcard (up to 220g/m ² [58.7-lb bond] for cover sheet)
	Stacking Tray: 46 to 210g/m ² (12-lb bond to 56-lb bond) paper (up to 220g/m ² [58.7-lb bond] for cover sheet)
	Booklet Tray: 60 to 90g/m ² (16-lb bond to 24-lb bond) paper (up to 220g/m ² [58.7-lb bond] for cover sheet)
Paper Capacity (*2)	Top Tray: 500 sheets
	Cover Sheet Tray: 200 sheets
	Stacking Tray: 2,000 sheets (200 sets)
	Booklet Tray: 20 sets
Stapling Capacity (*2)	Stapler: 2 to 100 sheets (2 to 65 sheets for A4 size or larger)
	Centre binding: 2 to 15 sheets (including covers)
Paper Capacity for Folding (*2)	Fold and staple: 2 to 15 sheets 2-fold: 1 to 5 sheets
Power Source	100 - 120 / 220 - 240 V~, 50/60 Hz, 2.0 / 1.0 A or more
Power Consumption	Maximum: 175 W or less Stand-by: Approximately 30 W or less Sleep mode: Approximately 1W or less
Operating Noise	Operating: 68 dB or less
Operating Environment	Temperature: 15°C to 30°C (59°F to 86°F) ; Humidity: 40% to 70% (no dew condensation)
Mass (*3)	130kg (286lb) (with transfer unit: 143 kg [315lb])
Dimensions (W x D x H)	1,050 mm x 725 mm x 1,165 mm (41 ⁵ / ₁₆ " x 28 ⁹ / ₁₆ " x 45 ⁷ / ₈ ") (with transfer unit: 1,358 mm x 725 mm x 1,165mm [53 ⁷ / ₁₆ " x 28 ⁹ / ₁₆ " x 45 ⁷ / ₈ "])

*1 The maximum paper size that can be specified by the printer driver is 316 mm x 460 mm (12⁷/₁₆" x 18¹/₈").

*2 For 85g/m² (22.6-lb bond), A4

*3 Consumables are not included.

A		
Add cover	2	
B		
Booklet	13, 18	
C		
Check Settings Error	25	
Consumables Error	25	
Cover	43, 44, 46, 47, 48	
E		
Error	24	
Error Message	24	
Error Number	24	
Error symbols	24	
F		
F1	31	
F12	38	
F13	39	
F14	39	
F15	40	
F16	41	
F17	42	
F2	32	
F3	33	
F4	34	
F5	35	
F6	36	
F7	37	
Finisher	1	
Functions	2	
H		
H3	30	
H4	30	
L		
List of Options	53	
		Location for Installation iv, vi
O		
Offset Output	15	
Operation Environment	vi	
Output Tray	15	
Overall Dimensions	vi	
P		
Paper Fold	11	
Paper fold	21	
Paper Jam	28	
Paper Jam Error	26	
Paper Receiving Section	30	
Punching	8	
R		
Right Transfer Path Cover	30	
S		
Service Call	25	
Specifications	54	
Staple	16	
Stapler	6	
Stapler Cartridge UR1	43, 46	
Stapler Cartridge UR2	44, 47	
Stapler Cartridge UR3	44, 47	
Staples	43	
Stapling	45	
T		
Trash Box in Punching Unit	48	
U		
Unit Error	26	
W		
Warning	27	